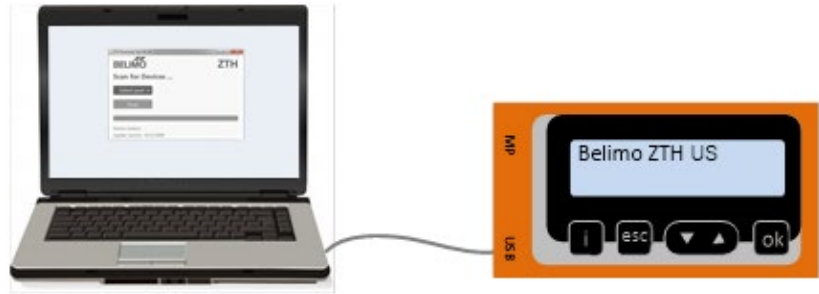


Firmware Upgrade of the ZTH US

- **Simplest use**
- **Upgrade using USB connection**

**Required material for the Upgrade****Material**

Laptop with Windows 7/8/10/11 and USB Interface with ZTH US device and free USB Interface -

Programming software "[ZTH-Updater Vx_xx.exe](#)",
Executable program including ZTH firmware

Belimo Website

Update Preparation


Download the ZTH-updater from the Belimo website. No installation is required. If the required device driver is not installed on the computer, it will be installed automatically during the first start.

Update procedure


1. Start ZTH Updater program



2. Connect ZTH to the computer

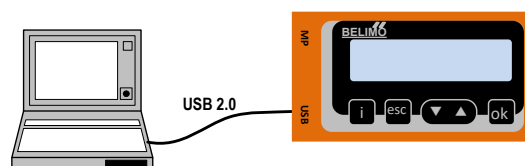
**Update Process**

3.

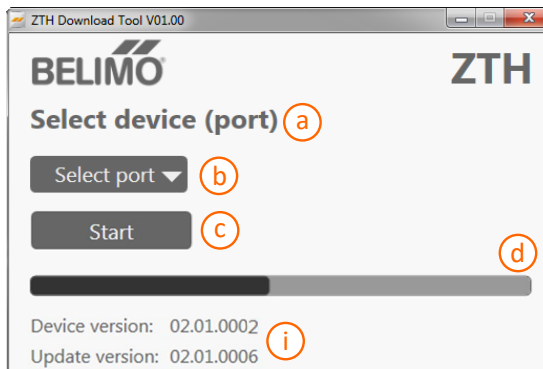

- a** If a ZTH is indicated, the status change from "Scan for Devices..." to "Select device (port) "
- b** Select USB port that is shown
- i** Version information:
Version on the device and the update program
- c** Start update
- d** Observe the progress bar

4. Final message of the upgrade process

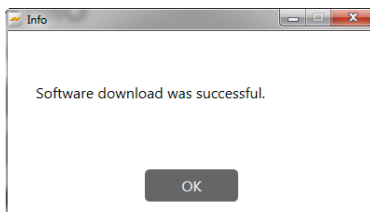

Troubleshooting

Message	Possible cause	Solve problem
	There is no ZTH connected to the computer	Connect ZTH to the computer
	USB is not installed (correctly)	Download USB driver from the Belimo website and install the driver manually (administrator privileges required)