

Technical data sheet

ZoneTight™, 3-way, Sweat

• For closed chilled and hot water systems

 For switching functions and 2-point controls on the water side of air-handling units and heating systems

• Snap-assembly of the actuator



Picture may differ from product





Type overview

Туре	DN
Z3050QS-E	15

Technical data

FI BC CI	uid uid Temp Range (water) ody Pressure Rating lose-off pressure Δps ifferential pressure Δpmax	chilled or hot water, up to 60% glycol 36212°F [2100°C] 360 psi 40 psi
Bo	ody Pressure Rating lose-off pressure Δps	360 psi
CI	lose-off pressure Δps	-
	· ·	40 psi
Di	ifferential pressure Δpmax	
	· · · · · · · · · · · · · · · · · · ·	40psi
Fl	ow characteristic	linear
Le	eakage rate	0%
Pi	ipe connection	Sweat
In	nstallation orientation	upright to horizontal (in relation to the spindle)
Se	ervicing	maintenance-free
Fl	ow Pattern	3-way Diverting
C	V	1
Materials Va	alve body	forged brass
St	tem	brass
St	tem seal	EPDM O-ring
Se	eat	PTFE, O-Ring EPDM
0.	-ring	EPDM (lubricated)
Ba	all	chrome plated brass
Suitable actuators No	on Fail-Safe	CQB(X)
El	ectronic fail-safe	CQKB(X)

Safety notes



WARNING: This product can expose you to lead which is known to the State of California to cause cancer and reproductive harm. For more information go to www.p65warnings.ca.gov
 If temperature exceeds 212°F operating range due to a boiler control failure the valve will safely contain the hot water but manufacturers product warranty becomes invalid. Valve and actuator replacement is at the expense of others.




Product features

Application	The QCV zone valves are suited for large commercial buildings where higher close-off and the ability to change flow is desired. Common applications include unit ventilators, fan coil units, VAV reheat coils, fin tube casing, radiant panels and duct coils. The valve fits in space restricted areas and can be assembled without the use of tools.		
Flow/Mounting details			
Operating mode	The change-over zone valve is adjusted by a rota by an on/off signal.	ary actuator. The rotary actuator is controlled	
Simple direct mounting	Tool-free snap assembly.		
	The actuator can be plugged on the valve by hand (Caution! Just vertical movements). Pins must match the holes on the flange.		
	The mounting orientation in relation to the valve two times)	e can be selected in 180° increments. (Possible	
tallation notes			

Inst

Permissible installation orientation

The ball valve can be installed upright to horizontal. The ball valve may not be installed in a hanging position, i.e. with the stem pointing downwards.

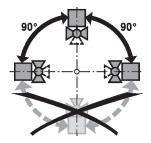

Water quality requirements Belimo valves are regulating devices. For the valves to function correctly in the long term, they must be kept free from particle debris (e.g. welding beads during installation work). The installation of a suitable strainer is recommended.

> Servicing Ball valves and rotary actuators are maintenance-free.


> > Before any service work on the control element is carried out, it is essential to isolate the rotary actuator from the power supply (by unplugging the electrical cable if necessary). Any pumps in the part of the piping system concerned must also be switched off and the appropriate slide valves closed (allow all components to cool down first if necessary and always reduce the system pressure to ambient pressure level).

> > The system must not be returned to service until the ball valve and the rotary actuator have been correctly reassembled in accordance with the instructions and the pipeline has been refilled by professionally trained personnel.






Direction of flow in both directions possible. Flow direction

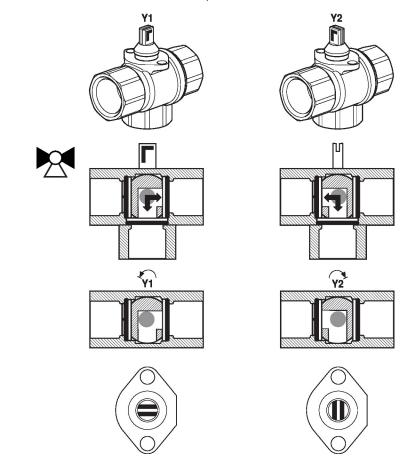

Flow setting At the actuator the end stop clip has to be removed in order to get the angle of rotation of 90°, which is needed for the change-over functionality.

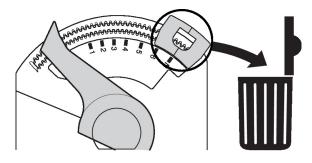


Remove end stop clip

Dimensions

Туре	DN	Weight	
Z3050QS-E	15	0.4 lb [0.18 kg]	



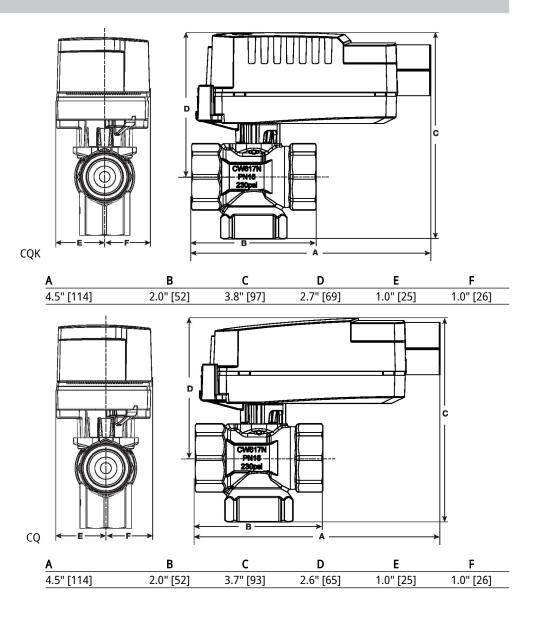



On/Off, Electrical fail-safe, 24 V

- Nominal voltage AC/DC 24 V
- Control On/Off





Technical data

Electrical data	Nominal voltage	AC/DC 24 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V
	Power consumption in operation	2.5 W
	Power consumption in rest position	0.5 W
	Transformer sizing	5 VA
	Electrical Connection	22 GA plenum cable, 3 ft [1 m], 10 ft [3 m] or 16 ft [5 m], with 1/2" NPT conduit connector
	Overload Protection	electronic thoughout 090° rotation
	Electrical Protection	actuators are double insulated
Functional data	Bridging time (PF)	2 s
	Pre-charging time	520 s
	Angle of rotation	90°
	Angle of rotation note	adjustable with mechanical stop
	Running Time (Motor)	75 s / 90°
	Running time fail-safe	<60 s
	Noise level, motor	35 dB(A)
	Noise level, fail-safe	35 dB(A)
	Position indication	pointer
Safety data	Power source UL	Class 2 Supply
	Degree of protection IEC/EN	IP40
	Degree of protection NEMA/UL	NEMA 2
	Enclosure	UL Enclosure Type 2
	Agency Listing	cULus acc. to UL60730-1A/-2-14, CAN/CSA E60730-1:02
		CE acc. to 2014/30/EU and 2014/35/EU
	Quality Standard	ISO 9001
	UL 2043 Compliant	Suitable for use in air plenums per Section 300.22(C) of the NEC and Section 602 of the IMC
	Ambient humidity	Max. 95% RH, non-condensing
	Ambient temperature	35104°F [240°C]
	Storage temperature	-40176°F [-4080°C]
	Servicing	maintenance-free
Weight	Weight	0.43 lb [0.19 kg]



Technical data sheet

Technical data				
	Materials	Housing material	UL94-5VA	
Product features				
	Application	Electrical fail-safe On/Off Zor	neTight actuator.	
	, pproduction	Valve selection should be do	ne in accordance with the flow parameters and system s mounted directly to the valve without the need for t	
		The actuator operates in res	ponse to AC/DC 24 V.	
		Angle of rotation is adjustable	le with the integrated mechanical stop.	
Electrical installation				
 INSTALLATION NOTES Actuators may be connected in parallel. Power consumption and input impedance must be observed. Actuators may also be powered by DC 24 V. Actuators with plenum cable do not have numbers; use color codes instead. Meets cULus requirements without the need of an electrical ground connection. Warning! Live electrical components! During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individua who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury. 			e necessary er individual e tasks.	
Wiring diagrams	23 AB Bik Commo Red Hot +	n		