

Technical data sheet

Z3100QS-J

ZoneTight™, 3-way, Sweat

- For closed cold and warm water systems
- For switching functions and 2-point controls on the water side of air-handling units and heating systems
- Snap-assembly of the actuator







Type overview

Туре	DN
Z3100QS-J	25

Technical data

Functional data	Valve size [mm]	1" [25]	
	Fluid	chilled or hot water, up to 60% glycol	
	Fluid Temp Range (water)	36212°F [2100°C]	
	Body Pressure Rating	360 psi	
	Close-off pressure ∆ps	40 psi	
	Differential pressure Δpmax	40psi linear 0% Sweat	
	Flow characteristic		
	Leakage rate		
	Pipe connection		
	Installation orientation	upright to horizontal (in relation to the stem)	
	Servicing	maintenance-free	
	Flow Pattern	3-way Diverting	
	Cv	4.4	
Materials	Valve body	forged brass	
	Stem	brass	
	Stem seal	EPDM O-ring	
	Seat	PTFE, O-Ring EPDM	
	O-ring	EPDM (lubricated)	
	Ball	chrome plated brass	
Suitable actuators	Non Fail-Safe	CQB(X)	
	Electrical fail-safe	CQKB(X)	

Safety notes



WARNING: This product can expose you to lead which is known to the State of California to cause cancer and reproductive harm. For more information go to www.p65warnings.ca.gov
If temperature exceeds 212°F operating range due to a boiler control failure the valve will safely contain the hot water but manufacturers product warranty becomes invalid. Valve and actuator replacement is at the expense of others.




Product features

	Application	The QCV zone valves are suited for large commercial buildings where higher close-off and the ability to change flow is desired. Common applications include unit ventilators, fan coil units, VAV reheat coils, fin tube casing, radiant panels and duct coils. The valve fits in space restricted areas and can be assembled without the use of tools.
Flov	v/Mounting details	
	Operating mode	The change-over zone valve is adjusted by a rotary actuator. The rotary actuator is controlled by an on/off signal.
Simp	le direct mounting	Tool-free snap assembly.
		The actuator can be plugged on the valve by hand (Caution! Just vertical movements). Pins must match the holes on the flange.
		The mounting orientation in relation to the valve can be selected in 180° increments. (Possible two times)
tallation notes		

Inst

Permissible installation orientation

The ball valve can be installed upright to horizontal. The ball valve may not be installed in a hanging position, i.e. with the stem pointing downwards.

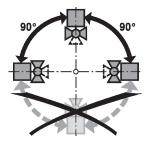

Water quality requirements Belimo valves are regulating devices. For the valves to function correctly in the long term, they must be kept free from particle debris (e.g. welding beads during installation work). The installation of a suitable strainer is recommended.

> Servicing Ball valves and rotary actuators are maintenance-free.


> > Before any service work on the control element is carried out, it is essential to isolate the rotary actuator from the power supply (by unplugging the electrical cable if necessary). Any pumps in the part of the piping system concerned must also be switched off and the appropriate slide valves closed (allow all components to cool down first if necessary and always reduce the system pressure to ambient pressure level).

> > The system must not be returned to service until the ball valve and the rotary actuator have been correctly reassembled in accordance with the instructions and the pipeline has been refilled by professionally trained personnel.






Direction of flow in both directions possible. Flow direction

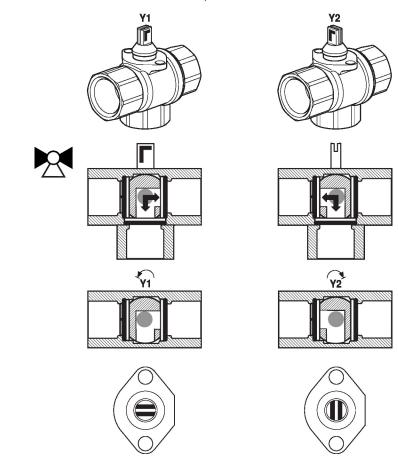

Flow setting At the actuator the end stop clip has to be removed in order to get the angle of rotation of 90°, which is needed for the change-over functionality.

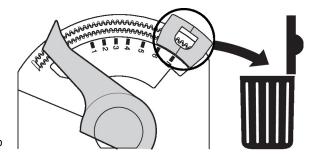


Remove end stop clip

Dimensions

Туре	DN	Weight	
Z3100QS-J	25	1.6 lb [0.74 kg]	



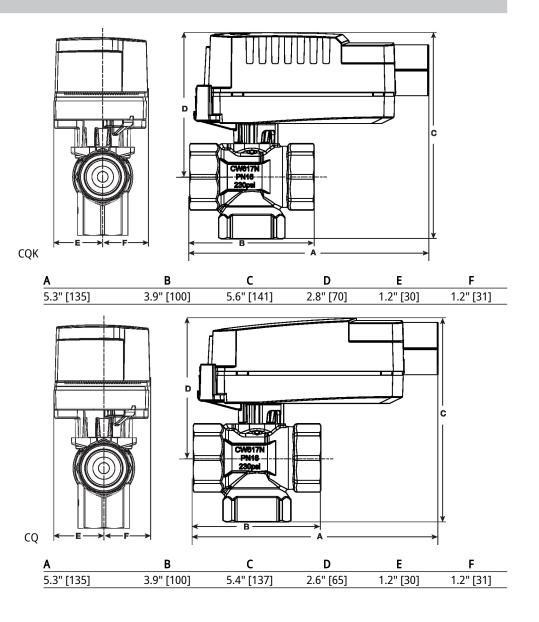



Technical data sheet

CQBUP-3

On/Off, Floating point, Non fail-safe, 100...240 V

- Nominal voltage AC 100...240 V
- Control On/Off, Floating point









Technical data

Electrical data	Nominal voltage	AC 100240 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 85265 V
	Power consumption in operation	1 W
	Power consumption in rest position	0.7 W
	Transformer sizing	2 VA
	Electrical Connection	19 GA appliance cable, 3ft [1 m], with 1/2" NPT conduit connector
	Overload Protection	electronic thoughout 090° rotation
	Electrical Protection	actuators are double insulated
Functional data	Angle of rotation	90°
	Angle of rotation note	adjustable with mechanical stop
	Running Time (Motor)	75 s / 90°
	Noise level, motor	35 dB(A)
	Position indication	pointer
Safety data	Power source UL	Class 2 Supply
	Degree of protection IEC/EN	IP40
	Degree of protection NEMA/UL	NEMA 2
	Enclosure	UL Enclosure Type 2
	Agency Listing	cULus acc. to UL60730-1A/-2-14, CAN/CSA E60730-1:02
		CE acc. to 2014/30/EU and 2014/35/EU
	Quality Standard	ISO 9001
	UL 2043 Compliant	Suitable for use in air plenums per Section 300.22(C) of the NEC and Section 602 of the IMC
	Ambient humidity	Max. 95% RH, non-condensing
	Ambient temperature	35104°F [240°C]
	Storage temperature	-40176°F [-4080°C]
	Servicing	maintenance-free
Weight	Weight	0.48 lb [0.22 kg]




Technical data sheet

Technical data			
	Materials	Housing material	UL94-5VA
Product features			
	Application	 Non-Fail Safe On/Off/Floating Point ZoneTight actuator. Valve selection should be done in accordance with the flow parameters and system specifications. 	
		The actuator is mounted dire	ectly to the valve without the need for tools or additional linkage.
		The actuator operates in res integrated mechanical stop.	ponse to AC 100240 V. Angle of rotation is adjustable with the
Electrical installation			
	\times	INSTALLATION NOTES	
	(A)	Actuators with appliance cable	es are numbered.
	Actuators may be connected in parallel. Power consumption and input impedance must be observed.		
	AB A	Actuators with plenum cable o	lo not have numbers; use color codes instead.
Meets cULus requirements without the need of an electrical ground connection.			
			only UL-Class 2 voltage to the terminals of auxiliary switches. of line voltage/safety extra low voltage is not allowed. onents!
		During installation, testing, se to work with live electrical cor who has been properly traine	rvicing and troubleshooting of this product, it may be necessary nponents. Have a qualified licensed electrician or other individua d in handling live electrical components perform these tasks. afety precautions when exposed to live electrical components

Wiring diagrams

On/Off AC 110...230 V

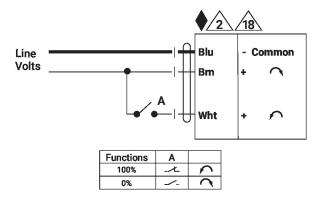

Floating Point AC 110...230 V

