

Technical data sheet

Rotary actuator for ball valves

- Torque motor 10 Nm
- Nominal voltage AC 100...240 V
- Control Open/close, 3-point
- PWIS/LABS-compliant according to VDMA 24364



Technical data

Electrical data	Nominal voltage	AC 100240 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 85265 V
	Power consumption in operation	3 W
	Power consumption in rest position	0.6 W
	Power consumption for wire sizing	7 VA
	Connection supply / control	Cable 1 m, 3x 0.75 mm ²
	Parallel operation	Yes (note the performance data)
Functional data	Torque motor	10 Nm
	Position feedback U note	Max. 1 mA
	Manual override	with push-button, can be locked
	Running time motor	90 s / 90°
	Sound power level, motor	35 dB(A)
	Position indication	Mechanical, pluggable
Safety data	Protection class IEC/EN	II, reinforced insulation
	Protection class UL	II, reinforced insulation
	Degree of protection IEC/EN	IP54
	Degree of protection NEMA/UL	NEMA 2
	Enclosure	UL Enclosure Type 2
	EMC	CE according to 2014/30/EU
	Low voltage directive	CE according to 2014/35/EU
	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
	UL Approval	cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1
		The UL marking on the actuator depends on
		the production site, the device is UL-compliant
	PWIS/LABS-conformity	in any case According to VDMA 24364 (test class C1)
	T WIS/ LABS-comornity	Approved for use in zone II
		Cleaning with low-pressure plasma treatment
	Type of action	Туре 1
	Rated impulse voltage supply / control	2.5 kV
	Pollution degree	3
	Ambient humidity	Max. 95% RH, non-condensing
	Ambient temperature	-3050°C [-22122°F]
	Storage temperature	-1040°C [14104°F]



BELIMO	Technical data sheet	NR230A-LA
Technical data		
Safety data	Servicing	maintenance-free
Weight	Weight	0.75 kg
Safety notes		
Ĺ	 systems and must not be use or in any other airborne mean Outdoor application: only pose aggressive gases interfere dia conditions remain within the Caution: Power supply voltag Only authorised specialists mainstallation regulations must The switch for changing the cospecialists. The direction of recircuit. The device may only be open can be replaced or repaired be Cables must not be removed The device contains electrical household refuse. All locally we responsibility of the custome for a period of one year after and cleanly. Proof of proper, purchaser. Ensure that the reat the products with bare hands 	ssible in case that no (sea) water, snow, ice, insolation or rectly with the device and that it is ensured that the ambient thresholds according to the data sheet at any time. e! ay carry out installation. All applicable legal or institutional be complied with during installation. direction of rotation may only be operated by authorised otation must not in particular be reversed in a frost protection ed at the manufacturer's site. It does not contain any parts that by the user.
Product features		

Simple direct mounting	Straightforward direct mounting on the ball valve with only one central screw. The assembly tool is integrated in the plug-in position indication. The mounting orientation in relation to the ball valve can be selected in 90° steps.
Manual override	Manual override with push-button possible (the gear train is disengaged for as long as the button is pressed or remains locked).
Adjustable angle of rotation	Adjustable angle of rotation with mechanical end stops.

Accessories

Electrical accessories	Description	Туре
	Auxiliary switch 1x SPDT add-on	S1A
	Auxiliary switch 2x SPDT add-on	S2A
	Feedback potentiometer 140 Ω add-on	P140A
	Feedback potentiometer 1 k Ω add-on	P1000A
	Feedback potentiometer 10 kΩ add-on	P100004

Electrical installation



Caution: Power supply voltage!


Parallel connection of other actuators possible. Observe the performance data. Direction of rotation switch is covered. Factory setting: Direction of rotation Y2.





Electrical installation

- Wire colours:
- 1 = blue
- 2 = brown
- 3 = white

Wiring diagrams

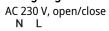


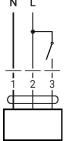


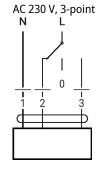

1	2	3	医斑
-~~L	≁L	~-	A - AB = 0%
Ļ ↓	Ļ	-~~~	A - AB = 100%
-∽L	-	~	stop
Ž	~	~~	A - AB = 100%

Dimensions

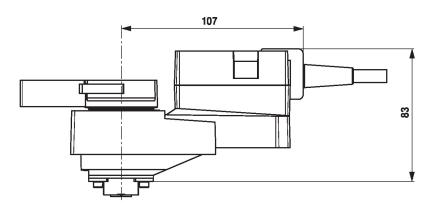

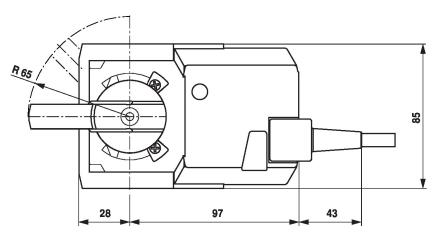

Further documentation

- The complete product range for water applications
- Data sheets for ball valves
- Installation instructions for actuators and/or ball valves
- General notes for project planning