

Cloud capable and communicative rotary actuator for ball valves

- Torque motor 20 Nm
- Nominal voltage AC/DC 24 V
- Control modulating, communicative, hybrid, Cloud
- Communication via BACnet IP, Modbus TCP and Cloud
- Ethernet 10/100 Mbit/s, TCP/IP, integrated web server
- Conversion of sensor signals





Technical data

_, , , , , , , ,		
Electrical data	Nominal voltage	AC/DC 24 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V
	Power consumption in operation	6 W
	Power consumption in rest position	1.25 W
	Power consumption for wire sizing	8 VA
	Connection supply / control	Cable 1 m, 6x 0.5 mm ²
	Connection Ethernet	RJ45 socket
	Parallel operation	Yes (note the performance data)
Data bus communication	Communicative control	Cloud
		BACnet/IP
		Modbus TCP
	Number of nodes	BACnet / Modbus see interface description
Functional data	Torque motor	20 Nm
	Operating range Y	210 V
	Input impedance	34 kΩ
	Operating range Y variable	0.510 V
	Position accuracy	±5%
	Manual override	with push-button, can be locked
	Running time motor	90 s / 90°
	Running time motor variable	90350 s
	Adaptation setting range	manual
	Sound power level, motor	45 dB(A)
	Position indication	Mechanical, pluggable
Safety data	Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)
	Degree of protection IEC/EN	IP40
		IP54 when using protective cap or protective
		grommet for RJ45 socket
	EMC	CE according to 2014/30/EU
	Type of action	Type 1
	Rated impulse voltage supply / control	0.8 kV
	Pollution degree	3
	Ambient humidity	Max. 95% RH, non-condensing
	Ambient temperature	-3050°C [-22122°F]
	Storage temperature	-4080°C [-40176°F]



Technical data

Safety data	Servicing	maintenance-free
Weight	Weight	1.0 kg

Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or
 aggressive gases interfere directly with the device and that it is ensured that the ambient
 conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · Cables must not be removed from the device.
- To calculate the torque required, the specifications supplied by the damper manufacturers
 concerning the cross-section and the design, as well as the installation situation and the
 ventilation conditions must be observed.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product features

Operating mode

The actuator is controlled via the Cloud, BACnet IP or Modbus TCP and drives to the position defined by the control signal. Various data points can be written and read via the same interfaces.

Hybrid mode:

The actuator receives its analog control signal from the higher level controller and drives to the position defined. Using the Cloud, BACnet IP or Modbus TCP, various data points can be read and with the exception of the control signal written.

Converter for sensors

Connection option for two sensors (passive sensor, active sensor or switching contact). The actuator serves as an analogue/digital converter for the transmission of the sensor signal to the higher level system.

Communication

The parametrisation can be carried out through the integrated web server (RJ45 connection to the web browser), by communicative means or via the Cloud.

Additional information regarding the integrated web server can be found in the separate documentation.


"Peer to Peer" connection

http://belimo.local:8080 The Notebook must be set to "DHCP". Make sure that only one network connection is active.

Standard IP address:

http://192.168.0.10:8080 Static IP address Password (read-only):

> User name: «guest» Password: «guest»

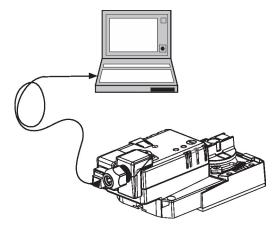



Product features

Simple direct mounting Straightforward direct mounting on the ball valve with only one central screw. The assembly

tool is integrated in the plug-in position indication. The mounting orientation in relation to $% \left(1\right) =\left(1\right) \left(1\right)$

the ball valve can be selected in 90° steps.

Data recording The recorded data (integrated data recording for 13 months) can be used for analytical

purposes.

Download csv files via web browser.

Manual override Manual override with push-button possible (the gear train is disengaged for as long as the

button is pressed or remains locked).

Adjustable angle of rotation Adjustable angle of rotation with mechanical end stops.

High functional reliability The actuator is overload protected, requires no limit switches and automatically stops when

the end stop is reached.

Home position The first time the supply voltage is switched on, i.e. at the time of commissioning, the actuator

carries out an adaptation, which is when the operating range and position feedback adjust

themselves to the mechanical setting range.

The actuator then moves into the position defined by the control signal.

Adaptation and synchronisation An adaptation can be triggered manually by pressing the "Adaptation" button. Both

mechanical end stops are detected during the adaptation (entire setting range).

The actuator then moves into the position defined by the control signal.

Accessories

Electrical accessories	lectrical accessories Description	
	Grommet for RJ connection module, Multipack 50 pcs.	Z-STRJ.1
Tools	Tools Description	
Service tool, with ZIP-USB function, for parametrisable and communicative Belimo actuators, VAV controller and HVAC performance.		ZTH EU
	devices Connecting cable 5 m. A: RI11 6/4 7TH FILER: 6-pin for connection to	7K1-GFN

Electrical installation



Supply from isolating transformer.

service socket

Parallel connection of other actuators possible. Observe the performance data.

Wire colours:

1 = black

2 = red

5 = orange

10 = yellow/black


11 = yellow/pink

12 = yellow/grey



Electrical installation

Wiring diagrams

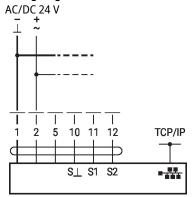





Connection of a notebook for parametrisation and manual control via RJ45.

Optional connection via RJ45 (direct connection to notebook / connection via Intranet or Internet) for access to the integrated web server

Functions




The connection diagrams shows connections for the first sensor on terminal S1, while the second sensor can be connected identically on terminal S2.

Parallel use of different sensor types is permitted.


For hybrid operation, S1 is used for the control signal Y and must be configured as an active sensor.

Functions with specific parameters (Parametrisation necessary)


TCP/IP (Cloud) / BACnet IP / Modbus TCP

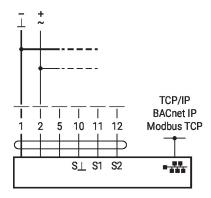


Connection of active sensors

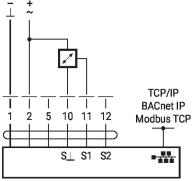

TCP/IP (Cloud) / BACnet IP / Modbus TCP with analogue setpoint (hybrid operation)

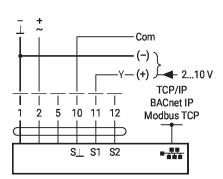

Switching contact connection

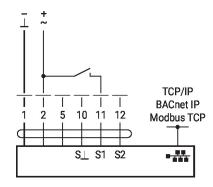





Functions

Functions with specific parameters (Parametrisation necessary)

Connection of passive sensors

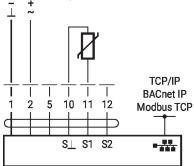

Operating controls and indicators

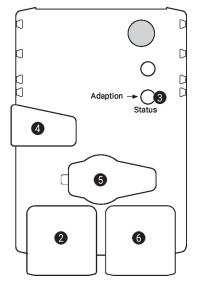

2 LED display green

Off: No power supply or wiring error

On: Actuator starts operation

Flickering: In operation

Push-button and LED display yellow

Off: Standard mode

On: Adaptation or synchronisation process active

Press button: Triggers angle of rotation adaptation, followed by standard mode

4 Manual override button

Press button: Gear train disengages, motor stops, manual override possible

Release button: Gear train engages, standard mode

5 Service plug


For connecting parametrisation and service tools


6 RJ45 socket

For the connection of TCP/IP (Cloud), BACnet IP and Modbus TCP



Dimensions

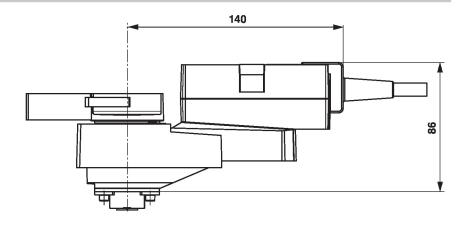

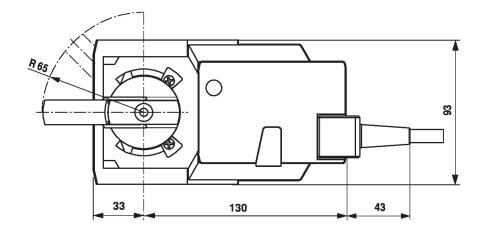

Further documentation

- General notes for project planning
- Instruction Webserver
- BACnet Interface description
- Modbus Interface description
- Description clientAPI