

ZoneTight™, 3-way, Press fit

- For closed chilled and hot water systems
- For switching functions and 2-point controls on the water side of air-handling units and heating systems
- Snap-assembly of the actuator





5-year warranty

Picture may differ from product

Type overview			
Туре			DN
Z3100QPF-J			25
Technical data			
Fund	ctional data	Valve size [mm]	1" [25]
		Fluid	chilled or hot water, up to 60% glycol
		Fluid Temp Range (water)	36212°F [2100°C]
		Body Pressure Rating	250 psi
		Close-off pressure ∆ps	40 psi
		Differential pressure Δpmax	40psi

Flow characteristic

Leakage rate	0%
Pipe connection	Press fit
Installation orientation	upright to horizontal (in relation to the spindle)
Servicing	maintenance-free

linear

Flow Pattern	3-way Diverting
Cv	4.4

Stom	brace
Valve body	forged brass

Stem	brass	
Stem seal	EPDM O-ring	
Seat	PTFE, O-Ring EPDM	
Ball	chrome plated brass	
Non Fail Cafe	COD(V)	

Suitable actuators

Non Fail-Safe	CQB(X)
Electronic fail-safe	CQKB(X)

Safety notes



Materials

- WARNING: This product can expose you to lead which is known to the State of California to cause cancer and reproductive harm. For more information go to www.p65warnings.ca.gov
- If temperature exceeds 212°F operating range due to a boiler control failure the valve will safely contain the hot water but manufacturers product warranty becomes invalid. Valve and actuator replacement is at the expense of others.




Product features

Application

The QCV zone valves are suited for large commercial buildings where higher close-off and the ability to change flow is desired. Common applications include unit ventilators, fan coil units, VAV reheat coils, fin tube casing, radiant panels and duct coils. The valve fits in space restricted areas and can be assembled without the use of tools.

Flow/Mounting details

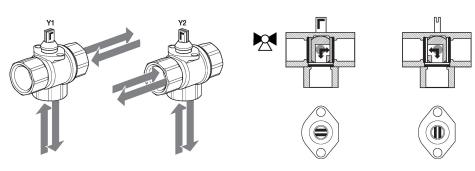

Operating mode

The change-over zone valve is adjusted by a rotary actuator. The rotary actuator is controlled by an on/off signal.

Simple direct mounting

Tool-free snap assembly.


The actuator can be plugged on the valve by hand (Caution! Just vertical movements). Pins must match the holes on the flange.

The mounting orientation in relation to the valve can be selected in 180° increments. (Possible two times)

Installation notes

Permissible installation orientation

The ball valve can be installed upright to horizontal. The ball valve may not be installed in a hanging position, i.e. with the stem pointing downwards.

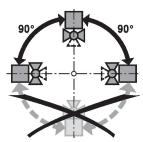

Water quality requirements

Belimo valves are regulating devices. For the valves to function correctly in the long term, they must be kept free from particle debris (e.g. welding beads during installation work). The installation of a suitable strainer is recommended.

Servicing

Ball valves and rotary actuators are maintenance-free.


Before any service work on the control element is carried out, it is essential to isolate the rotary actuator from the power supply (by unplugging the electrical cable if necessary). Any pumps in the part of the piping system concerned must also be switched off and the appropriate slide valves closed (allow all components to cool down first if necessary and always reduce the system pressure to ambient pressure level).

The system must not be returned to service until the ball valve and the rotary actuator have been correctly reassembled in accordance with the instructions and the pipeline has been refilled by professionally trained personnel.




Installation notes

Flow direction Direction of flow in both directions possible.

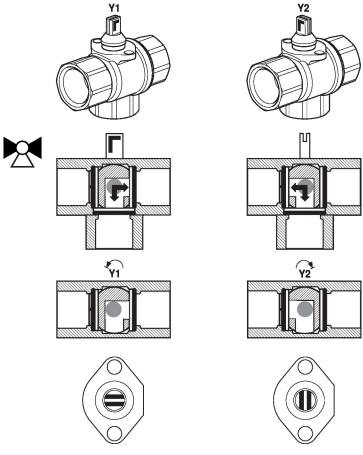

Flow setting At the actuator the end stop clip has to be removed in order to get the angle of rotation of 90°, which is needed for the change-over functionality.

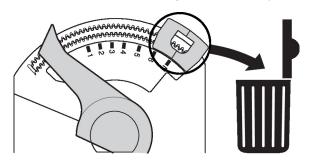

Remove end stop clip

Dimensions			
Туре	DN	Weight	
Z3100QPF-J	25	1.63 lb [0.74 kg]	



Dimensions

