

3-point rotary actuator with fail-safe for ball valves

- Torque motor 10 Nm
- Nominal voltage AC 100...240 V
- Control 3-point
- Deenergised open (NO)
- With 2 integrated auxiliary switches



Technical data

ectr		

Nominal voltage	AC 100240 V		
Nominal voltage frequency	50/60 Hz		
Nominal voltage range	AC 85265 V		
Power consumption in operation	4 W		
Power consumption in rest position	3 W		
Power consumption for wire sizing	15 VA		
Auxiliary switch	2x SPDT, 1x 10% / 1x 11100%		
Switching capacity auxiliary switch	1 mA3 A (0.5 A inductive), DC 5 VAC 250 V		
Connection supply / control	Cable 1 m, 4x 0.75 mm²		
Connection auxiliary switch	Cable 1 m, 6x 0.75 mm²		
Parallel operation	Yes (note the performance data)		
Torque motor	10 Nm		

Functional data

Torque motor	10 Nm
Torque fail-safe	10 Nm
Direction of motion motor	Y = 0 (A – AB = 0%)
Direction of motion fail-safe	Deenergised NO, valve open (A – AB = 100%)
Direction of motion note	for valves with L-bore (A $-$ AB = 0%)
Manual override	by means of hand crank and locking switch
Running time motor	90 s / 90°
Running time fail-safe	<20 s @ -2050°C / <60 s @ -30°C
Sound power level, motor	45 dB(A)
Position indication	Mechanical
Service life	Min. 60'000 fail-safe positions
Protection class IEC/EN	II. reinforced insulation

Safety data

II, reinforced insulation
II, reinforced insulation
II, reinforced insulation
IP54
NEMA 2
UL Enclosure Type 2
CE according to 2014/30/EU
CE according to 2014/35/EU
IEC/EN 60730-1 and IEC/EN 60730-2-14
cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1 The UL marking on the actuator depends on the production site, the device is UL-compliant in any case



Technical data sheet NRF230A-3-S2-O

Technical data			
Safety data	Type of action	Type 1.AA.B	
	Rated impulse voltage supply / control	2.5 kV	
	Rated impulse voltage auxiliary switch	2.5 kV	
	Pollution degree	3	
	Ambient humidity	Max. 95% RH, non-condensing	
	Ambient temperature	-3050°C [-22122°F]	
	Storage temperature	-4080°C [-40176°F]	
	Servicing	maintenance-free	
Weight	Weight	2.2 kg	

Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the device and that it is ensured that the ambient conditions remain within the thresholds according to the data sheet at any time.
- · Caution: Power supply voltage!
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · Cables must not be removed from the device.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.
- The two switches integrated in the actuator are to be operated either on power supply voltage or at safety extra-low voltage. The combination power supply voltage/safety extralow voltage is not permitted.

Product features

Operating mode

The actuator moves the valve to the operating position at the same time as tensioning the return spring. The valve is turned back to the fail-safe position by spring force when the supply voltage is interrupted.

Simple direct mounting

Simple direct mounting on the ball valve with only one screw. The mounting orientation in relation to the ball valve can be selected in 90° steps.

Manual override

By using the hand crank the valve can be operated manually and engaged with the locking switch at any position. Unlocking is carried out manually or automatically by applying the operating voltage.

Adjustable angle of rotation

Adjustable angle of rotation with mechanical end stops.

High functional reliability

The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.

Flexible signalling

The actuator has one auxiliary switch with a fixed setting and one adjustable auxiliary switch. They permit a 10% or 11...100% angle of rotation to be signaled.

Electrical installation



Caution: Power supply voltage!

Parallel connection of other actuators possible. Observe the performance data.




Electrical installation


Wire colours:


- 1 = blue
- 2 = brown
- 3 = white
- 4 = white
- S1 = violet
- S2 = red
- S3 = white
- S4 = orange
- S5 = pink
- S6 = grey

Wiring diagrams




	1	2	3	4	Y = 0	
-	7	Ļ ↓	⊸ L	⊸ _	1,	A - AB = 100%
[-	7	↓ L	⊸_L	→\L	\bigcirc 0	A - AB = 0%
[-	7	⊸ L	-J-	~	stop	stop
Ŀ	~L	↓ L		⊸ L	\bigcirc 0	A - AB = 0%







Operating controls and indicators

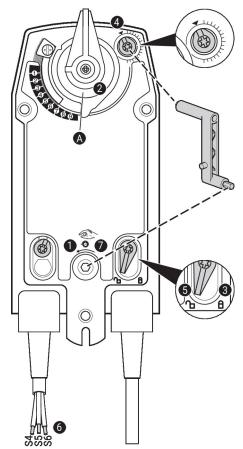

Auxiliary switch settings



Note: Perform settings on the actuator only in deenergised state.

For the auxiliary switch position settings, carry out points 1 to 7 successively.

Manual override

Turn the hand crank until the desired switching position is set.

2 Shaft clamp

Edge line A displays the desired switching position of the actuator on the scale.

3 Fasten the locking device

Turn the locking switch to the "Locked padlock" symbol.

4 Auxiliary switch

Turn rotary knob until the notch points to the arrow symbol.

5 Unlock the locking device

Turn the locking switch to the "Unlocked padlock" symbol or unlock with the hand crank.

6 Cable


Connect continuity tester to S4 + S5 or to S4 + S6.

Manual override

Turn the hand crank until the desired switching position is set and check whether the continuity tester shows the switching point.



Dimensions

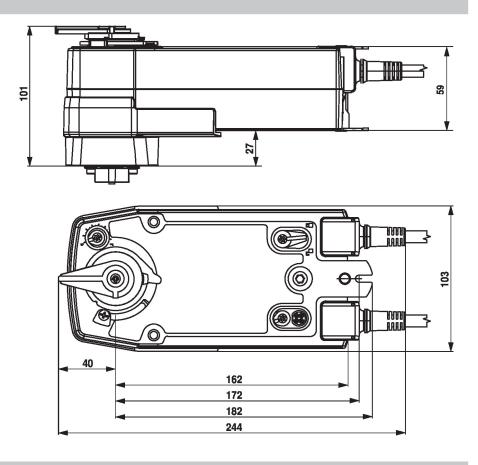

Further documentation

- The complete product range for water applications
- Data sheets for ball valves
- Installation instructions for actuators and/or ball valves
- General notes for project planning