

Technical data sheet

Z2050QPTPF-D

ZoneTight™, 2-way, Press fit

- For closed cold and warm water systems
- For modulating control of air-handling and
- heating systems on the water side
- Snap-assembly of the actuator





Type overview

| DN |
|----|
| 15 |
| |

Technical data

| Functional data | Valve size [mm] | 0.5" [15] |
|--------------------|--------------------------|--|
| | Fluid | chilled or hot water, up to 60% glycol |
| | Fluid Temp Range (water) | 36212°F [2100°C] |
| | Differential pressure | 550 psi |
| | Body Pressure Rating | 250 psi |
| | Close-off pressure ∆ps | 200 psi |
| | Flow characteristic | equal percentage |
| | Flow accuracy | ±5% |
| | Leakage rate | 0% |
| | Angle of rotation note | Operating range 1590° |
| | Pipe connection | Press fit |
| | Installation orientation | upright to horizontal (in relation to the stem) |
| | Servicing | maintenance-free |
| | Flow Pattern | 2-way |
| | Controllable flow range | 75° |
| Materials | Valve body | forged brass |
| | Stem | stainless steel |
| | Stem seal | EPDM O-ring |
| | Seat | PTFE, O-Ring EPDM |
| | Characterized disc | incorporated into the ball |
| | Diaphragm | EPDM |
| | O-ring | EPDM |
| | Ball | stainless steel |
| | Diaphragm | EPDM |
| Suitable actuators | Non Fail-Safe | CQB(X) |
| | Electronic fail-safe | CQKB(X) |
| Terms | Abbreviations | V'nom = nominal flow with valve completely opened V'max = maximum flow rate, set by the angle- of-rotation limitation on the actuator |




Safety notes

| Ń | WARNING: This product can expose you to lead which is known to the State of California to cause cancer and reproductive harm. For more information go to www.p65warnings.ca.gov If temperature exceeds 212°F operating range due to a boiler control failure the valve will safely contain the hot water but manufacturers product warranty becomes invalid. Valve and actuator replacement is at the expense of others. |
|--------------------------------------|---|
| Product features | |
| Application | The PIQCV zone valves with its pressure independent technology are suited for large commercial buildings where higher close-off and dynamic balancing is required. Common applications include unit ventilators, fan coil units, VAV reheat coils, fin tube casing, radiant panels and duct coils. The valve fits in space restricted areas and can be assembled without the use of tools. |
| Operating mode | The ball valve is adjusted by a rotary actuator. The actuator is controlled by a commercially available modulating or 3-point control system and moves the ball of the valve – the throttling device – to the position dictated by the control signal. Open the characterized control valve counterclockwise and close it clockwise. |
| Flow characteristic | Equal percentage flow control is ensured by the special design of the ball. |
| Installation notes | |
| Permissible installation orientation | The ball valve can be installed upright to horizontal. The ball valve may not be installed in a hanging position, i.e. with the stem pointing downwards. |
| | |
| Water quality requirements | Belimo valves are regulating devices. For the valves to function correctly in the long term, they must be kept free from particle debris (e.g. welding beads during installation work). The installation of a suitable strainer is recommended. |
| Servicing | Ball valves and rotary actuators are maintenance-free. |
| | Before any service work on the control element is carried out, it is essential to isolate the rotary actuator from the power supply (by unplugging the electrical cable if necessary). Any pumps in the part of the piping system concerned must also be switched off and the appropriate slide valves closed (allow all components to cool down first if necessary and always reduce the system pressure to ambient pressure level). |
| | The system must not be returned to service until the ball valve and the rotary actuator have been correctly reassembled in accordance with the instructions and the pipeline has been refilled by professionally trained personnel. |



Installation notes

The direction of flow, specified by an arrow on the housing, is to be complied with, since Flow direction otherwise the ball valve could become damaged. Please ensure that the ball is in the correct position (marking on the stem).

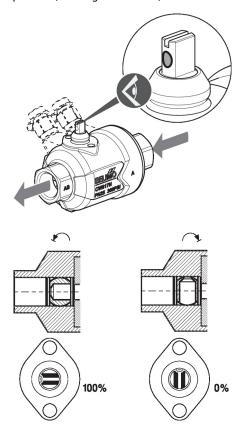

Flow setting

The angle of rotation of the CQ.. actuator can be changed by end stop clip in 2.5° increments. This is used to set the V'max value (maximum flow rate of the valve).

Remove end stop clip and place at desired position.


After every change of the flow setting by means of end stop clip, an adaptation must be triggered on the modulating actuators.

| | | | | | | | Cli | p Pos | ition f | or Flo | w Adj | ustme | ent (Gl | PM) | | | | | | |
|--------------------|-----|----|-----|-----|-----|-----|-----|-------|---------|--------|-------|-------|---------|-----|-----|-----|-----|-----|-----|------------|
| Valve Model (1/2") | 1 | 1+ | 2- | 2 | 2+ | 3- | 3 | 3+ | 4- | 4 | 4+ | 5- | 5 | 5+ | 6- | 6 | 6+ | N- | N | No Clip |
| Z2050QPTPF-B | | | 0.1 | | | | | 0.2 | | | 0.3 | | 0.4 | | 0.5 | | 0.6 | 0.7 | 0.8 | 0.9 |
| Z2050QPTPF-D | 0.2 | | | 0.3 | | | 0.4 | 0.5 | | 0.6 | 0.7 | 0.8 | 0.9 | 1.0 | 1.2 | 1.3 | 1.5 | 1.6 | 1.8 | 2.0 |
| Z2050QPTPF-F | | | | 0.6 | | 0.7 | 0.8 | 0.9 | 1.0 | 1.3 | 1.5 | 1.7 | 1.9 | 2.2 | 2.5 | 2.8 | 3.1 | 3.3 | 3.6 | 4.3 |
| Valve Model 3/4" | | | | | | | | | | | | | | | | | | | | |
| Z2075QPTPF-G | | | 1.6 | 1.8 | 2.1 | 2.4 | 2.7 | 3.0 | 3.3 | 3.7 | 4.0 | 4.4 | 4.9 | 5.3 | 5.8 | 6.3 | 6.7 | 7.2 | 7.7 | 9.0 |
| Runtime | 30 | 33 | 35 | 37 | 39 | 41 | 43 | 45 | 47 | 49 | 51 | 53 | 55 | 58 | 60 | 62 | 64 | 66 | 68 | 75 |

Dimensions

| Туре | DN | Weight | |
|--------------|----|------------------|--|
| Z2050QPTPF-D | 15 | 2.0 lb [0.90 kg] | |



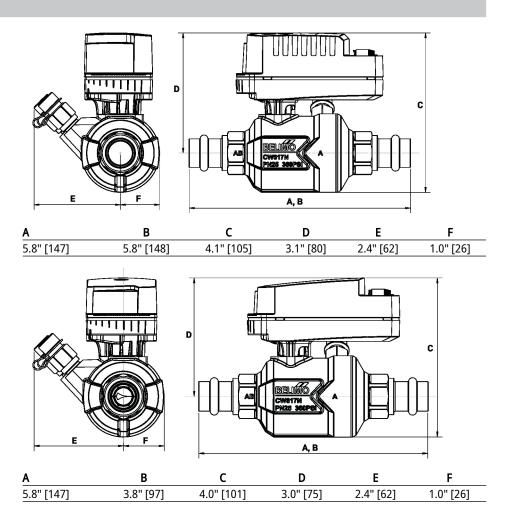



On/Off, Electrical fail-safe, 24 V

- Nominal voltage AC/DC 24 V
- Control On/Off





Technical data

| Electrical data | Nominal voltage | AC/DC 24 V |
|-----------------|------------------------------------|---|
| | Nominal voltage frequency | 50/60 Hz |
| | Nominal voltage range | AC 19.228.8 V / DC 21.628.8 V |
| | Power consumption in operation | 2.5 W |
| | Power consumption in rest position | 0.5 W |
| | Transformer sizing | 5 VA |
| | Electrical Connection | 22 GA plenum cable, 3 ft [1 m], 10 ft [3 m] or 16 ft [5 m], with 1/2" NPT conduit connector |
| | Overload Protection | electronic thoughout 090° rotation |
| | Electrical Protection | actuators are double insulated |
| Functional data | Bridging time (PF) | 2 s |
| | Pre-charging time | 520 s |
| | Angle of rotation | 90° |
| | Angle of rotation note | adjustable with mechanical stop |
| | Running Time (Motor) | 75 s / 90° |
| | Running time fail-safe | <60 s |
| | Noise level, motor | 35 dB(A) |
| | Noise level, fail-safe | 35 dB(A) |
| | Position indication | pointer |
| Safety data | Power source UL | Class 2 Supply |
| | Degree of protection IEC/EN | IP40 |
| | Degree of protection NEMA/UL | NEMA 2 |
| | Enclosure | UL Enclosure Type 2 |
| | Agency Listing | cULus acc. to UL60730-1A/-2-14, CAN/CSA E60730-1:02 |
| | | CE acc. to 2014/30/EU and 2014/35/EU |
| | Quality Standard | ISO 9001 |
| | UL 2043 Compliant | Suitable for use in air plenums per Section 300.22(C) of the NEC and Section 602 of the IMC |
| | Ambient humidity | Max. 95% RH, non-condensing |
| | Ambient temperature | 35104°F [240°C] |
| | Storage temperature | -40176°F [-4080°C] |
| | Servicing | maintenance-free |
| Weight | Weight | 0.43 lb [0.19 kg] |



Technical data sheet

| Technical data | | | | |
|-------------------------|---------------------------------|---|--|--|
| | Materials | Housing material | UL94-5VA | |
| | | | | |
| Product features | | | | |
| | Application | Electrical fail-safe On/Off Zor | neTight actuator. | |
| | , pproduction | Valve selection should be do | ne in accordance with the flow parameters and system s mounted directly to the valve without the need for t | |
| | | The actuator operates in res | ponse to AC/DC 24 V. | |
| | | Angle of rotation is adjustable | le with the integrated mechanical stop. | |
| Electrical installation | | | | |
| | | observed. Actuators may also be powere Actuators with plenum cable d Meets cULus requirements wit Warning! Live electrical compo During installation, testing, se to work with live electrical com who has been properly trained | lo not have numbers; use color codes instead. chout the need of an electrical ground connection. conents! rvicing and troubleshooting of this product, it may be ponents. Have a qualified licensed electrician or othe d in handling live electrical components perform thes afety precautions when exposed to live electrical com | e necessary er individual e tasks. |
| Wiring diagrams | 23 AB Bik Commo Red Hot + | n | | |