

ZoneTight™, 2-way, Internal thread

- For closed cold and warm water systems
- For switching functions and 2-point controls on the water side of air-handling units and heating systems
- Snap-assembly of the actuator





Type overview			
Type			DN 25
Z2100Q-K			25
Technical data			
Functional data	ional data	Valve size [mm]	1" [25]
		Fluid	chilled or hot water, up to 60% glycol
		Fluid Temp Range (water)	36212°F [2100°C]
		Body Pressure Rating	360 psi
		Close-off pressure Δps	75 psi
		Differential pressure Δpmax	40psi
		Flow characteristic	equal percentage
		Leakage rate	0%
		Angle of rotation note	Operating range 1590°
		Pipe connection	Internal thread NPT (female)
		Installation orientation	upright to horizontal (in relation to the stem)
		Servicing	maintenance-free
		Flow Pattern	2-way
		Controllable flow range	75°
		Cv	8.2
	Materials	Valve body	forged brass
		Stem	brass
		Stem seal	EPDM O-ring
		Seat	PTFE, O-Ring EPDM
		O-ring	EPDM (lubricated)

Safety notes



Suitable actuators

Ball

Non Fail-Safe

Electrical fail-safe

• WARNING: This product can expose you to lead which is known to the State of California to cause cancer and reproductive harm. For more information go to www.p65warnings.ca.gov

chrome plated brass

CQB(X)

CQKB(X)

• If temperature exceeds 212°F operating range due to a boiler control failure the valve will safely contain the hot water but manufacturers product warranty becomes invalid. Valve and actuator replacement is at the expense of others.



Product features

Application

The QCV zone valves are suited for large commercial buildings where higher close-off and the ability to change flow is desired. Common applications include unit ventilators, fan coil units, VAV reheat coils, fin tube casing, radiant panels and duct coils. The valve fits in space restricted areas and can be assembled without the use of tools.

Operating mode

The ball valve is adjusted by a rotary actuator. The rotary actuator is controlled by an on/off signal or by a commercially available modulating or floating point control system and moves the ball of the ball valve – the throttling device – to the position preset by the control signal. Open the ball valve is carried out counterclockwise and close it clockwise.

Simple direct mounting

Tool-free snap assembly.


The actuator can be plugged on the valve by hand (Caution! Just vertical movements). Pins must match the holes on the flange.

The mounting orientation in relation to the valve can be selected in 180° increments. (Possible two times)

Installation notes

Permissible installation orientation

The ball valve can be installed upright to horizontal. The ball valve may not be installed in a hanging position, i.e. with the stem pointing downwards.

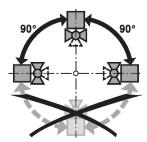

Water quality requirements

Belimo valves are regulating devices. For the valves to function correctly in the long term, they must be kept free from particle debris (e.g. welding beads during installation work). The installation of a suitable strainer is recommended.

Servicing


Ball valves and rotary actuators are maintenance-free.


Before any service work on the control element is carried out, it is essential to isolate the rotary actuator from the power supply (by unplugging the electrical cable if necessary). Any pumps in the part of the piping system concerned must also be switched off and the appropriate slide valves closed (allow all components to cool down first if necessary and always reduce the system pressure to ambient pressure level).

The system must not be returned to service until the ball valve and the rotary actuator have been correctly reassembled in accordance with the instructions and the pipeline has been refilled by professionally trained personnel.

Flow direction

Direction of flow in both directions possible.

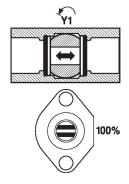

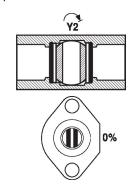



Installation notes

Flow setting


The angle of rotation of the actuator can be changed by a clip in 2.5° increments. This is used to set the kvs value (maximum flow rate of the valve).


Remove end stop clip and place at desired position.

After every change of the flow setting by means of end stop clip, an adaptation must be triggered on the modulating actuators.

Dimensions

Туре	DN	Weight
Z2100Q-K	25	0.53 lb [0.24 kg]

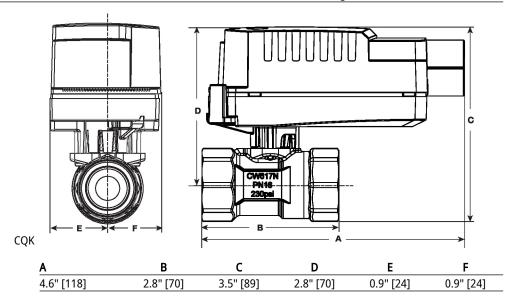

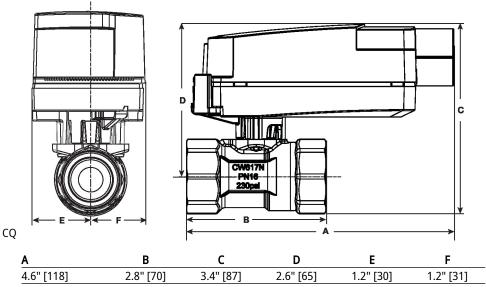



On/Off, Electrical fail-safe, 24 V

- Nominal voltage AC/DC 24 V
- Control On/Off







Technical data

Electrical data	Nominal voltage	AC/DC 24 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V
	Power consumption in operation	2.5 W
	Power consumption in rest position	0.5 W
	Transformer sizing	5 VA
	Electrical Connection	22 GA plenum cable, 3 ft [1 m], with 1/2" NPT conduit connector

	Conduit Connector	
Overload Protection	electronic thoughout 090° rotation	
Electrical Protection	actuators are double insulated	

Functional data

Bridging time (PF)	2 s	
Pre-charging time	520 s	
Angle of rotation	90°	
Angle of rotation note	adjustable with mechanical stop	
Running Time (Motor)	75 s / 90°	
Running time fail-safe	<60 s	
Noise level, motor	35 dB(A)	
Noise level, fail-safe	35 dB(A)	
Position indication	pointer	

Power source UL	Class 2 Supply
Degree of protection IEC/EN	IP40
Degree of protection NEMA/UL	NEMA 2
Enclosure	UL Enclosure Type 2
Agency Listing	cULus acc. to UL60730-1A/-2-14, CAN/CSA E60730-1:02 CE acc. to 2014/30/EU and 2014/35/EU
Quality Standard	ISO 9001
UL 2043 Compliant	Suitable for use in air plenums per Section 300.22(C) of the NEC and Section 602 of the IMC
Ambient humidity	Max. 95% RH, non-condensing
Ambient temperature	35104°F [240°C]
Storage temperature	-40176°F [-4080°C]
Servicing	maintenance-free
Mainle	0 EE IF 10 3E I1



Technical data

Materials Housing material UL94-5VA

Product features

Application

Electrical fail-safe On/Off ZoneTight actuator.

Valve selection should be done in accordance with the flow parameters and system specifications. The actuator is mounted directly to the valve without the need for tools or additional linkage.

The actuator operates in response to AC/DC 24 V.

Angle of rotation is adjustable with the integrated mechanical stop.

Electrical installation

INSTALLATION NOTES

Actuators with appliance cables are numbered.

🛕 Actuators may be connected in parallel. Power consumption and input impedance must be

Actuators may also be powered by DC 24 V.

Actuators with plenum cable do not have numbers; use color codes instead.

Meets cULus requirements without the need of an electrical ground connection.




Warning! Live electrical components!

During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

Wiring diagrams

AC 24 V Transformer

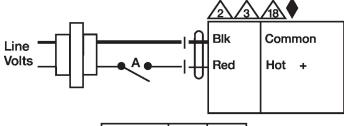

Functions	Α	
0% ◀	1 1	(
100% 🕏	/ -	(
Fail Position	100%	Open