

#### Flow sensor

Calibrated ultrasonic flow sensor, temperature and glycol compensated. With DC 0.5...10 V output signal. This sensor can be used in closed cold and warm water systems and is robust against dirt and magnetite. There is also a low pressure drop across the sensor.





# **Type Overview**

Туре	DN	FS [l/s]	Δp [kPa]	PN	Output signal active volumetric flow	
FM065F-SZ	65	9.6	12	16	0.510 V	
FM080F-SZ	80	13.6	13	16	0.510 V	
FM100F-SZ	100	24.0	12	16	0.510 V	
FM125F-SZ	125	37.5	13	16	0.510 V	
FM150F-SZ	150	54.0	15	16	0.510 V	
			-			

FS: Full scale, maximum flow

 $\Delta p$ : Pressure drop at FS

# **Technical data**

Electrical data	Nominal voltage	AC/DC 24 V				
	Nominal voltage frequency	50/60 Hz				
	Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V				
Power consumption AC Power consumption DC		1 VA				
		0.5 W				
	Connection supply	Cable , 3 x 0.75 mm²				
Functional data	Sensor technology	Ultrasonic time-of-flight (with glycol and temperature compensation)				
	Application	Water				
	Voltage output	1 x 010 V, max. load 1 mA				
	PN	16				
	Pipe connection	Flange				
		according to EN 1092-2				
	Installation orientation	upright to horizontal				
	Servicing	maintenance-free				
Measuring data	Measured values	Flow				
	Measuring fluid	Water and water-glycol mixtures				
	Measuring principle	Ultrasonic volumetric flow measurement				
Specification Flow	Min. flow measurement	1% of FS				
	Measuring accuracy flow	±2% of the measured value (20100% FS) @ 20°C / glycol 0% vol. ±0.4% of FS (020% FS) @ 20°C / glycol 0% vol.				



Spe

**Technical data sheet** 

ecification Flow	Measuring accuracy flow note	±6% of the measured value (20100% FS) @ -20120°C / glycol 050% vol. ±1.2% of FS (020% FS) @ -20120°C / glycol 050% vol.				
	Measurement repeatability	±0.5% (Flow)				
Safety data	Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)				
	Power source UL	Class 2 Supply				
	Degree of protection IEC/EN	IP54				
	Degree of protection NEMA/UL	NEMA 2				
	Enclosure	UL Enclosure Type 2				
	EMC	CE according to 2014/30/EU				
	Certification IEC/EN	IEC/EN 60730-1:11 and IEC/EN 60730-2-15:10				
	Quality Standard	ISO 9001				
	Type of action	Туре 1				
	Rated impulse voltage supply	0.8 kV				
	Pollution degree	3				
	Ambient humidity	Max. 95% RH, non-condensing				
	Ambient temperature	-3050°C [-22122°F]				
	Fluid temperature	-20120°C [-4250°F] At a fluid temperature of <2°C [<36°F], frost protection must be guaranteed				
	Storage temperature	-4080°C [-40176°F]				
Materials	Flow measuring pipe	EN-GJL-250 (GG 25), with protective paint				

#### Safety notes



This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.

Outdoor applications: Only possible where (sea) water, snow, ice, sunlight or aggressive gases cannot interfere directly with the device and it can be guaranteed that the ambient conditions remain at all times within the thresholds according to the data sheet.

Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.

The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

### **Product Features**


Operating mode	The ultrasonic flow sensor is equipped with a flow pipe, four flow transmitters and an electronic circuit. A temperature sensor is mounted in the flow pipe to compensate the temperature effects.
	A sensor error occurs when the ultrasonic path is interrupted (air bubbles in the system, connection to ultrasonic transducers interrupted).
Patented glycol compensation	Glycol changes the viscosity of the heat transfer fluid and as a result affects the measured volumetric flow. Without glycol compensation, volumetric flow measurements can show errors of as much as 30 percent. The patented automatic glycol compensation significantly reduces the degree of measurement error.



#### Installation notes

Permissible installation orientation


The sensor can be installed upright to horizontal. The sensor may not be installed in a hanging position.

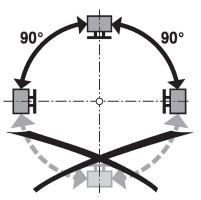

Installation in return

Installation in the return is recommended.

**Inlet section** In order to achieve the specified measuring accuracy, a flow-calming section or inflow section in the direction of the flow is to be provided upstream from the flow sensor. Its dimensions should be at least 5x DN.

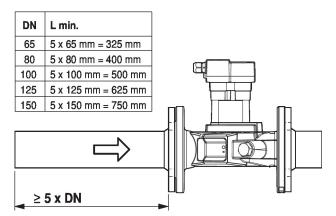

Water quality requirements

The water quality requirements specified in VDI 2035 must be adhered to.

Servicing Sensors are maintenance-free.

Before any service work on the sensor is carried out, it is essential to isolate the sensor from the power supply (by unplugging the electrical cables if necessary). Any pumps in the part of the piping system concerned must also be switched off and the appropriate slide valves closed (allow all components to cool down first if necessary and always reduce the system pressure to ambient pressure level).

The system must not be returned to service until the sensor has been correctly reassembled in accordance with the instructions and the pipeline has been refilled by professionally trained personnel.

**Flow direction** 

The direction of flow, specified by an arrow on the housing, is to be complied with, since otherwise the flow rate will be measured incorrectly.

## Wiring diagram




Supply from isolating transformer.




**Technical data sheet** 

## Wiring diagram

AC/DC 24 V, Output signal

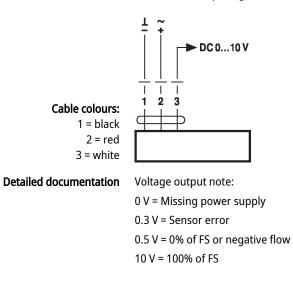

### Dimensions

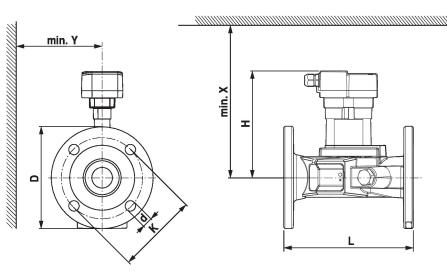

Туре	DN	DN ["]	L [mm]	H [mm]	D [mm]	d [mm]	K [mm]	X [mm]	Y [mm]	Weight
FM065F-SZ	65	2 1/2	240	193	185	4 x 19	145	263	132	13 kg
FM080F-SZ	80	3	260	200	200	8 x 19	160	270	140	15 kg
FM100F-SZ	100	4	262	202	230	8 x 19	180	272	155	18 kg
FM125F-SZ	125	5	314	209	255	8 x 19	210	279	167	24 kg
FM150F-SZ	150	6	334	219	285	8 x 23	240	289	182	30 kg

**Further documentation** 

• Installation instructions