

Modulating rotary actuator fail-safe for adjusting dampers in technical building installations

- Air damper size up to approx. 2 m²
- Torque motor 10 Nm
- Nominal voltage AC/DC 24 V
- Control modulating 2...10 V
- Position feedback 2...10 V
- With 2 integrated auxiliary switches
- PWIS/LABS-compliant according to VDMA 24364



Technical data

Electrical	data
------------	------

Nominal voltage	AC/DC 24 V
Nominal voltage frequency	50/60 Hz
Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V
Power consumption in operation	3.5 W
Power consumption in rest position	2.5 W
Power consumption for wire sizing	5.5 VA
Auxiliary switch	2x SPDT, 1x 10% / 1x 11100%
Switching capacity auxiliary switch	1 mA3 A (0.5 A inductive), DC 5 VAC 250 V
Connection supply / control	Cable 1 m, 4x 0.75 mm ²
Connection auxiliary switch	Cable 1 m, 6x 0.75 mm²
Parallel operation	Yes (note the performance data)
Torque motor	10 Nm
T C : 1 C	40.14

Functional data

r drailer operation	res (note the performance data)
Torque motor	10 Nm
Torque fail-safe	10 Nm
Operating range Y	210 V
Input impedance	100 kΩ
Position feedback U	210 V
Position feedback U note	Max. 0.5 mA
Position accuracy	±5%
Direction of motion motor	selectable with switch L/R
Direction of motion fail-safe	selectable by mounting L/R
Manual override	by means of hand crank and locking switch
Angle of rotation	Max. 95°
Angle of rotation note	adjustable starting at 33% in 2.5% steps (with mechanical end stop)
Running time motor	150 s / 90°
Running time fail-safe	<20 s @ -2050°C / <60 s @ -30°C
Sound power level, motor	<40 dB(A)
Mechanical interface	Universal shaft clamp 1025.4 mm
Position indication	Mechanical
Service life	Min. 60'000 fail-safe positions
Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)

Safety data

Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)
Power source UL	Class 2 Supply
Protection class auxiliary switch IEC/EN	II, reinforced insulation
Degree of protection IEC/EN	IP54
Degree of protection NEMA/UL	NEMA 2



Technical data

Safety data

Enclosure	UL Enclosure Type 2	
EMC	CE according to 2014/30/EU	
Low voltage directive	CE according to 2014/35/EU	
Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14	
UL Approval	cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1 The UL marking on the actuator depends on the production site, the device is UL-compliant in any case	
PWIS/LABS-conformity	According to VDMA 24364 (test class C1) Approved for use in zone II Cleaning with low-pressure plasma treatment	
Hygiene test	According to VDI 6022 Part 1 / SWKI VA 104-01, cleanable and disinfectable, low emission	
Type of action	Type 1.AA.B	
Rated impulse voltage supply / control	0.8 kV	
Rated impulse voltage auxiliary switch	2.5 kV	
Pollution degree	3	
Ambient humidity	Max. 95% RH, non-condensing	
Ambient temperature	-3050°C [-22122°F]	
Storage temperature	-1040°C [14104°F]	
Servicing	maintenance-free	
Weight	2.2 kg	

Safety notes



Weight

- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the device and that it is ensured that the ambient conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · Cables must not be removed from the device.
- To calculate the torque required, the specifications supplied by the damper manufacturers
 concerning the cross-section and the design, as well as the installation situation and the
 ventilation conditions must be observed.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.
- The two switches integrated in the actuator are to be operated either on power supply voltage or at safety extra-low voltage. The combination power supply voltage/safety extralow voltage is not permitted.
- PWIS/LABS-conformity is guaranteed as long as the packaging is unopened. Once the PWIS/LABS-compliant packaging has been opened, the proper handling of the products is the responsibility of the customer. PWIS/LABS-conformity of unopened products is guaranteed for a period of one year after cleaning, provided they are handled properly, professionally and cleanly. Proof of proper, professional and clean handling is the responsibility of the purchaser. Ensure that the required cleanliness of the products is maintained. Do not touch the products with bare hands. Belimo accepts no liability for the consequences resulting from the contamination of a product caused by the customer.



Product features

Operating mode The actuator is connected with a standard control signal of 0...10 V and moves the damper to the operating position at the same time as tensioning the return spring. The damper is turned

back to the fail-safe position by spring force when the supply voltage is interrupted.

Simple direct mounting Simple direct mounting on the damper shaft with a universal shaft clamp, supplied with an

anti-rotation device to prevent the actuator from rotating.

Manual override By using the hand crank the damper can be actuated manually and engaged with the locking

switch at any position. Unlocking is carried out manually or automatically by applying the

operating voltage.

Adjustable angle of rotation Adjustable angle of rotation with mechanical end stops.

Flexible signalling The actuator has one auxiliary switch with a fixed setting and one adjustable auxiliary switch.

They permit a 10% or 11...100% angle of rotation to be signaled.

Accessories

Electrical accessories	Description	Туре
	Auxiliary switch 2x SPDT	S2A-F
	Feedback potentiometer 1 k Ω	P1000A-F
	Signal converter voltage/current 100 kΩ 420 mA, Supply AC/DC 24 V	Z-UIC
	Positioner for wall mounting	SGA24
	Positioner for built-in mounting	SGE24
	Positioner for front-panel mounting	SGF24
	Positioner for wall mounting	CRP24-B1
Mechanical accessories	Description	Туре
	Shaft extension 240 mm ø20 mm for damper shaft ø822.7 mm	AV8-25
	End stop indicator	IND-AFB
	Shaft clamp reversible, for central mounting, for damper shafts ø12.7 /	K7-2
	19.0 / 25.4 mm	
	Ball joint suitable for damper crank arm KH8 / KH10	KG10A
	Ball joint suitable for damper crank arm KH8	KG8
	Damper crank arm Slot width 8.2 mm, clamping range ø1018 mm	KH8
	Actuator arm, for 3/4" shafts, clamping range ø1022 mm, Slot width 8.2 mm	KH-AFB
	Form fit insert 10x10 mm, Multipack 20 pcs.	ZF10-NSA-F
	Form fit insert 12x12 mm, Multipack 20 pcs.	ZF12-NSA-F
	Form fit insert 15x15 mm, Multipack 20 pcs.	ZF15-NSA-F
	Form fit insert 16x16 mm, Multipack 20 pcs.	ZF16-NSA-F
	Mounting kit for linkage operation for flat and side installation	ZG-AFB
	Baseplate extension	Z-SF
	Anti-rotation mechanism 230 mm, Multipack 20 pcs.	Z-ARS230L
	Hand crank 63 mm	ZKN2-B

Electrical installation



Supply from isolating transformer.

Parallel connection of other actuators possible. Observe the performance data.




Electrical installation


Wire colours:

- 1 = black
- 2 = red
- 3 = white
- 5 = orange
- S1 = violet
- S2 = red
- S3 = white
- S4 = orange
- S5 = pink
- S6 = grey


Wiring diagrams

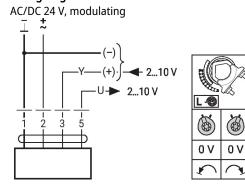

Auxiliary switch

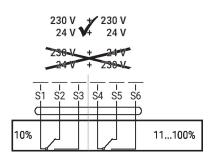

Operating controls and indicators

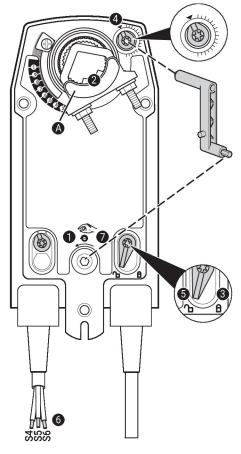

Auxiliary switch settings

1

R 🔞

0 V

0 V

Note: Perform settings on the actuator only in deenergised state.

For the auxiliary switch position settings, carry out points 1 to 2 successively.

Manual override

Turn the hand crank until the desired switching position is set.

2 Shaft clamp

Edge line A displays the desired switching position of the actuator on the scale.

3 Fasten the locking device

Turn the locking switch to the "Locked padlock" symbol.

4 Auxiliary switch

Turn rotary knob until the notch points to the arrow symbol.

5 Unlock the locking device

Turn the locking switch to the "Unlocked padlock" symbol or unlock with the hand crank.

6 Cable

Connect continuity tester to S4 + S5 or to S4 + S6.


Manual override

Turn the hand crank until the desired switching position is set and check whether the continuity tester shows the switching point.





Dimensions

Spindle length

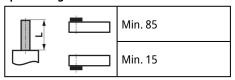

Clamping range

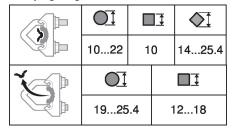

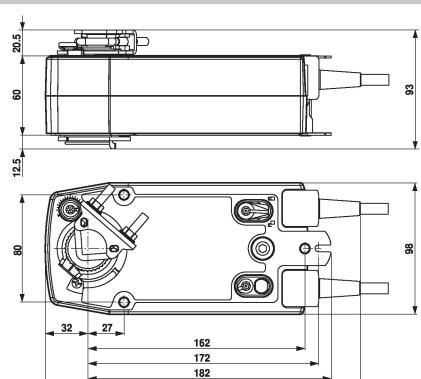

236