

Communicative damper actuator for adjusting dampers in technical building installations

- Air damper size up to approx. 2 m²
- Torque motor 10 Nm
- Nominal voltage AC/DC 24 V
- Control modulating, communicative
- Running time motor 35 s
- Communication via Belimo MP-Bus
- Conversion of sensor signals
- PWIS/LABS-compliant according to VDMA 24364



Technical data

| | | |
|-------------------------------|------------------------------------|--|
| Electrical data | Nominal voltage | AC/DC 24 V |
| | Nominal voltage frequency | 50/60 Hz |
| | Nominal voltage range | AC 19.2...28.8 V / DC 21.6...28.8 V |
| | Power consumption in operation | 4 W |
| | Power consumption in rest position | 1.5 W |
| | Power consumption for wire sizing | 7 VA |
| | Connection supply / control | Cable 1 m, 4x 0.75 mm ² |
| | Parallel operation | Yes (note the performance data) |
| Data bus communication | Communicative control | MP-Bus |
| | Number of nodes | MP-Bus max. 8 |
| Functional data | Torque motor | 10 Nm |
| | Torque variable | 25%, 50%, 75% reduced |
| | Operating range Y | 2...10 V |
| | Input impedance | 100 kΩ |
| | Operating range Y variable | Start point 0.5...30 V End point 2.5...32 V |
| | Operating modes optional | Open/close 3-point (AC only) Modulating (DC 0...32 V) |
| | Position feedback U | 2...10 V |
| | Position feedback U note | Max. 0.5 mA |
| | Position feedback U variable | Start point 0.5...8 V End point 2.5...10 V |
| | Position accuracy | ±5% |
| | Direction of motion motor | selectable with switch 0/1 |
| | Direction of motion variable | electronically reversible |
| | Direction of motion note | Y = 0 V: At switch position 0 (ccw rotation) / 1 (cw rotation) |
| | Manual override | with push-button, can be locked |
| | Angle of rotation | Max. 95° |
| | Angle of rotation note | can be limited on both sides with adjustable mechanical end stops |
| | Running time motor | 35 s / 90° |
| Running time motor variable | 20...75 s | |
| Sound power level, motor | 45 dB(A) | |
| Adaptation setting range | manual | |

Technical data

| | | |
|--|-----------------------------------|---|
| Functional data | Adaptation setting range variable | No action Adaptation when switched on Adaptation after pushing the manual override button |
| | Override control | MAX (maximum position) = 100% MIN (minimum position) = 0% ZS (intermediate position, AC only) = 50% |
| | Override control variable | MAX = (MIN + 32%)...100% MIN = 0%...(MAX - 32%) ZS = MIN...MAX |
| | Mechanical interface | Universal shaft clamp 8...26.7 mm |
| | Position indication | Mechanical, pluggable |
| | Safety data | Protection class IEC/EN |
| Power source UL | | Class 2 Supply |
| Degree of protection IEC/EN | | IP54 |
| Degree of protection NEMA/UL | | NEMA 2 |
| Enclosure | | UL Enclosure Type 2 |
| EMC | | CE according to 2014/30/EU |
| Certification IEC/EN | | IEC/EN 60730-1 and IEC/EN 60730-2-14 |
| UL Approval | | cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1 The UL marking on the actuator depends on the production site, the device is UL-compliant in any case |
| PWIS/LABS-conformity | | According to VDMA 24364 (test class C1) Approved for use in zone II Cleaning with low-pressure plasma treatment |
| Hygiene test | | According to VDI 6022 Part 1 / SWKI VA 104-01, cleanable and disinfectable, low emission |
| Type of action | | Type 1 |
| Rated impulse voltage supply / control | | 0.8 kV |
| Pollution degree | | 3 |
| Ambient humidity | | Max. 95% RH, non-condensing |
| Ambient temperature | | -30...50°C [-22...122°F] |
| Storage temperature | | -10...40°C [14...104°F] |
| Servicing | maintenance-free | |
| Weight | Weight | 0.79 kg |


Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the device and that it is ensured that the ambient conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- Cables must not be removed from the device.
- To calculate the torque required, the specifications supplied by the damper manufacturers concerning the cross-section and the design, as well as the installation situation and the ventilation conditions must be observed.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.
- PWIS/LABS-conformity is guaranteed as long as the packaging is unopened. Once the PWIS/LABS-compliant packaging has been opened, the proper handling of the products is the responsibility of the customer. PWIS/LABS-conformity of unopened products is guaranteed for a period of one year after cleaning, provided they are handled properly, professionally and cleanly. Proof of proper, professional and clean handling is the responsibility of the purchaser. Ensure that the required cleanliness of the products is maintained. Do not touch the products with bare hands. Belimo accepts no liability for the consequences resulting from the contamination of a product caused by the customer.

Product features

| | |
|-------------------------------------|--|
| Operating mode | <p>Conventional operation:</p> <p>The actuator is connected with a standard control signal of 0...10 V and drives to the position defined by the control signal. The measuring voltage U serves for the electrical display of the actuator position 0.5...100% and as control signal for other actuators.</p> <p>Operation on Bus:</p> <p>The actuator receives its digital control signal from the higher level controller via the MP-Bus and drives to the position defined. Connection U serves as communication interface and does not supply an analogue measuring voltage.</p> |
| Converter for sensors | <p>Connection option for a sensor (passive or active sensor or switching contact). The MP actuator serves as an analogue/digital converter for the transmission of the sensor signal via MP-Bus to the higher level system.</p> |
| Parametrisable actuators | <p>The factory settings cover the most common applications. Single parameters can be modified with the Belimo service tools MFT-P or ZTH EU.</p> |
| Simple direct mounting | <p>Simple direct mounting on the damper shaft with a universal shaft clamp, supplied with an anti-rotation device to prevent the actuator from rotating.</p> |
| Manual override | <p>Manual override with push-button possible (the gear train is disengaged for as long as the button is pressed or remains locked).</p> |
| Adjustable angle of rotation | <p>Adjustable angle of rotation with mechanical end stops.</p> |
| Home position | <p>The first time the supply voltage is switched on, i.e. at the time of commissioning, the actuator carries out a synchronisation. The synchronisation is in the home position (0%).</p> <p>The actuator then moves into the position defined by the control signal.</p> |



Product features

Adaptation and synchronisation An adaptation can be triggered manually by pressing the "Adaptation" button or with the PC-Tool. Both mechanical end stops are detected during the adaptation (entire setting range). Automatic synchronisation after pressing the manual override button is configured. The synchronisation is in the home position (0%). The actuator then moves into the position defined by the control signal. A range of settings can be adapted using the PC-Tool (see MFT-P documentation)

Accessories

| Tools | Description | Type |
|------------------------|---|------------|
| | Service tool, with ZIP-USB function, for parametrisable and communicative Belimo actuators, VAV controller and HVAC performance devices | ZTH EU |
| | Belimo PC-Tool, Software for adjustments and diagnostics | MFT-P |
| | Adapter for Service-Tool ZTH | MFT-C |
| | Connecting cable 5 m, A: RJ11 6/4 ZTH EU, B: 6-pin for connection to service socket | ZK1-GEN |
| | Connecting cable 5 m, A: RJ11 6/4 ZTH EU, B: free wire end for connection to MP/PP terminal | ZK2-GEN |
| Electrical accessories | Description | Type |
| | Auxiliary switch 1x SPDT add-on | S1A |
| | Auxiliary switch 2x SPDT add-on | S2A |
| | Feedback potentiometer 140 Ω add-on | P140A |
| | Feedback potentiometer 1 kΩ add-on | P1000A |
| | Feedback potentiometer 10 kΩ add-on | P10000A |
| | Signal converter voltage/current 100 kΩ 4...20 mA, Supply AC/DC 24 V | Z-UIC |
| | Positioner for wall mounting | SGA24 |
| | Positioner for built-in mounting | SGE24 |
| | Positioner for front-panel mounting | SGF24 |
| | Positioner for wall mounting | CRP24-B1 |
| | MP-Bus power supply for MP actuators | ZN230-24MP |
| Gateways | Description | Type |
| | Gateway MP to BACnet MS/TP | UK24BAC |
| | Gateway MP to Modbus RTU | UK24MOD |
| Mechanical accessories | Description | Type |
| | Actuator arm for standard shaft clamp (one-sided) | AH-25 |
| | Shaft extension 240 mm ø20 mm for damper shaft ø8...22.7 mm | AV8-25 |
| | Ball joint suitable for damper crank arm KH8 | KG8 |
| | Ball joint suitable for damper crank arm KH8 / KH10 | KG10A |
| | Damper crank arm Slot width 8.2 mm, clamping range ø10...18 mm | KH8 |
| | Shaft clamp one-sided, clamping range ø8...26 mm with insert, Multipack 20 pcs. | K-ENMA |
| | Shaft clamp one-sided, clamping range ø8...26 mm, Multipack 20 pcs. | K-ENSA |
| | Shaft clamp reversible, clamping range ø8...20 mm | K-NA |
| | Form fit insert 8x8 mm, Multipack 20 pcs. | ZF8-NMA |
| | Form fit insert 10x10 mm, Multipack 20 pcs. | ZF10-NSA |
| | Form fit insert 12x12 mm, Multipack 20 pcs. | ZF12-NSA |
| | Form fit insert 15x15 mm, Multipack 20 pcs. | ZF15-NSA |
| | Form fit insert 16x16 mm, Multipack 20 pcs. | ZF16-NSA |
| | Mounting kit for linkage operation for flat installation | ZG-NMA |
| | Anti-rotation mechanism 180 mm, Multipack 20 pcs. | Z-ARS180 |
| | Baseplate extension for NM..A to NM.. | Z-NMA |
| | Position indicator, Multipack 20 pcs. | Z-PI |

Electrical installation




Supply from isolating transformer.
Parallel connection of other actuators possible. Observe the performance data.

Wire colours:


- 1 = black
- 2 = red
- 3 = white
- 5 = orange

Wiring diagrams

MP-Bus

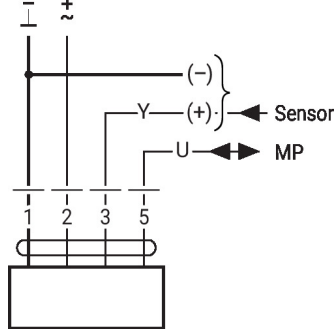

AC/DC 24 V, modulating

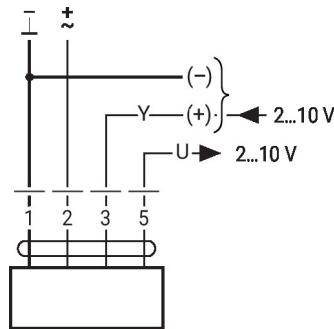


| | | | | |
|---|---|------|--|--|
| 1 | 2 | 3 | | |
| | | 2 V | | |
| | | 10 V | | |


Further electrical installations

Functions with basic values (conventional mode)



Override control with AC 24 V with relay contacts

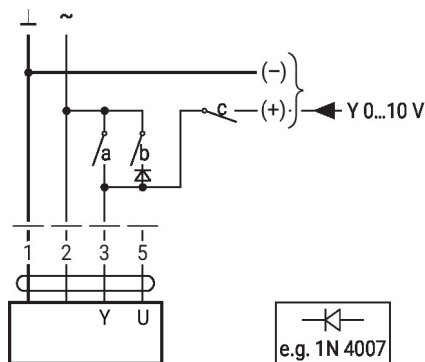

| | | | | | |
|---|---|---|---|---|--------|
| 1 | 2 | a | b | c | |
| | | | | | 0 % |
| | | | | | ZS 50% |
| | | | | | 100% |
| | | | | | Y |




Override control with AC 24 V with rotary switch

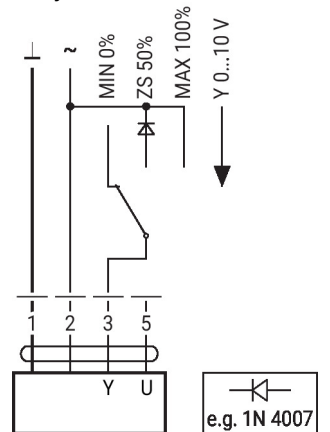


Functions with basic values (conventional mode)

Control remotely 0...100% with positioner SG..


Minimum limit with positioner SG..

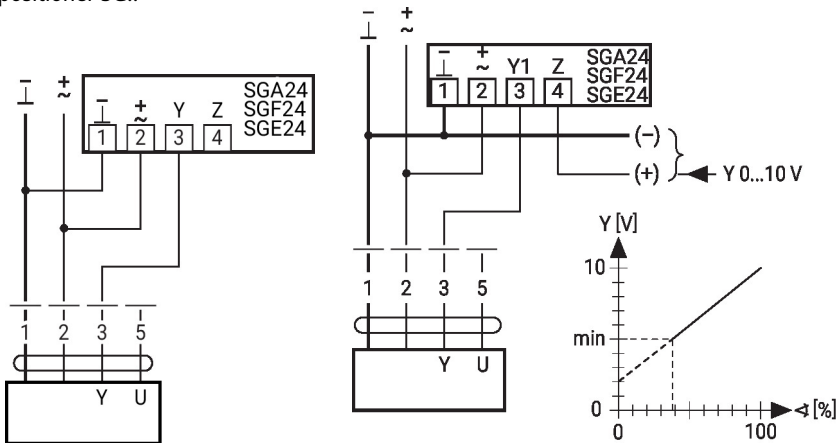

Primary/secondary operation (position-dependent)

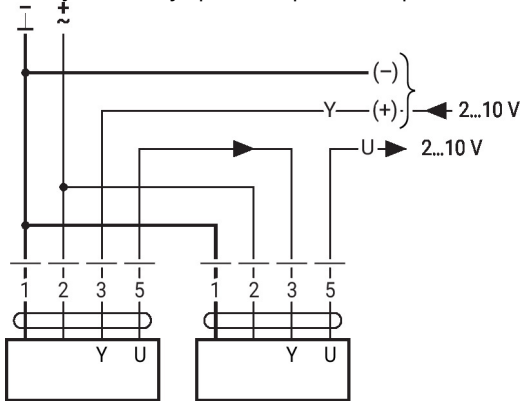

Control with 4...20 mA via external resistor

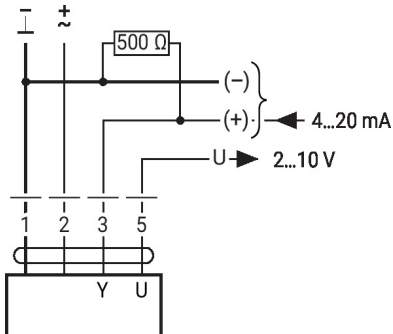


Caution:

The operating range must be set to DC 2...10 V.

The 500 Ohm resistor converts the 4...20 mA current signal to a voltage signal DC 2...10 V.

Functions with basic values (conventional mode)

Functional check

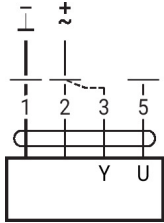


Procedure

1. Connect 24 V to connections 1 and 2
2. Disconnect connection 3:
 - With direction of rotation 0: Actuator rotates to the left
 - With direction of rotation 1: Actuator rotates to the right
3. Short-circuit connections 2 and 3:
 - Actuator runs in opposite direction


Functions with specific parameters (Parametrisation necessary)

Connection on the MP-Bus

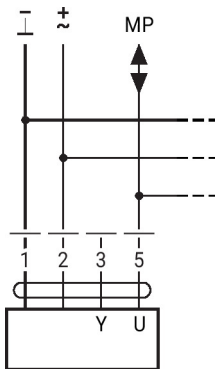


Max. 8 MP-Bus nodes

Connection of active sensors

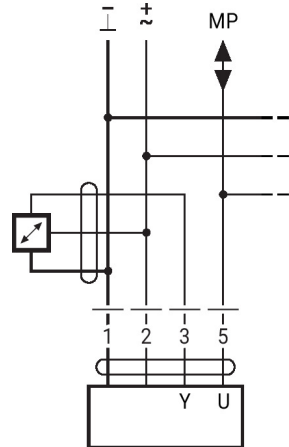

- Supply AC/DC 24 V
- Output signal 0...10 V (max. 0...32 V)
- Resolution 30 mV

Connection of external switching contact

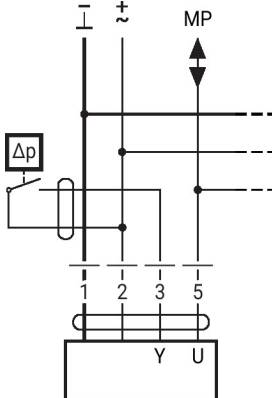


- Switching current 16 mA @ 24 V
- Start point of the operating range must be parametrised on the MP actuator as ≥ 0.5 V

Further electrical installations


Functions with specific parameters (Parametrisation necessary)

Connection of passive sensors

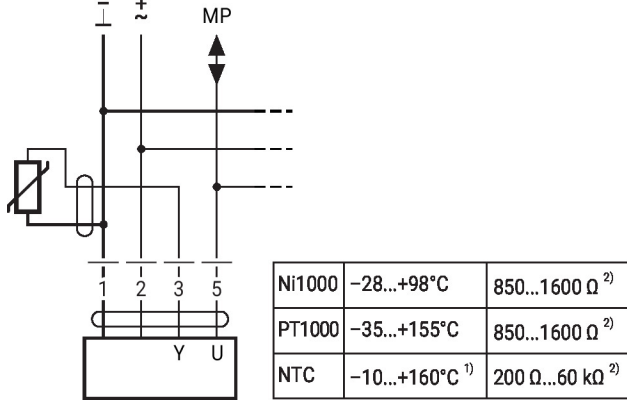


1) Depending on the type
 2) Resolution 1 Ohm
 Compensation of the measured value is recommended


Override control and limiting with AC 24 V with relay contacts

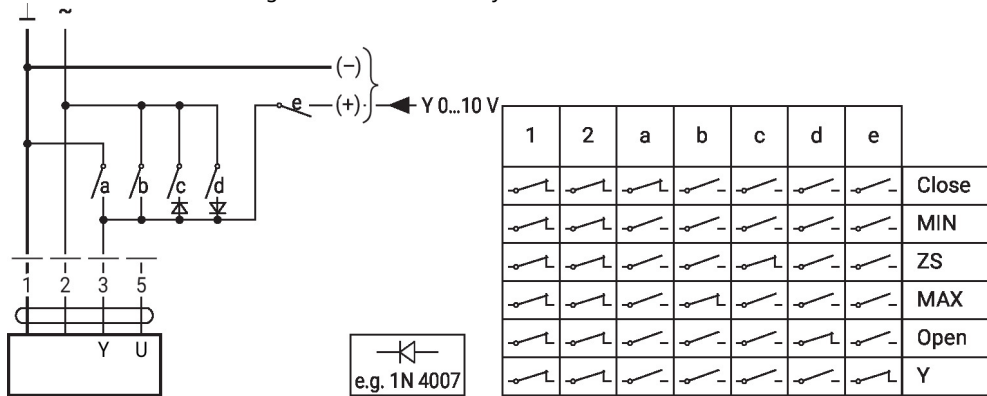

Control open/close

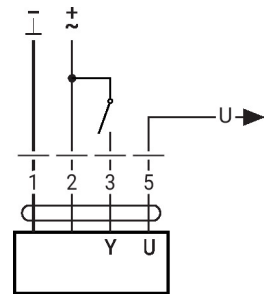


Override control and limiting with AC 24 V with rotary switch

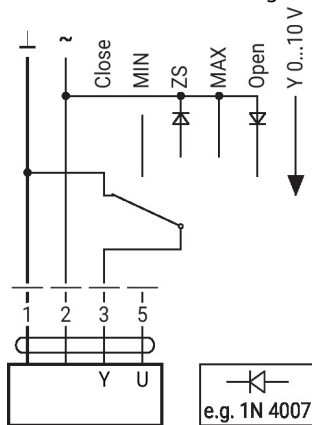


e.g. 1N 4007

Control 3-point with AC 24 V

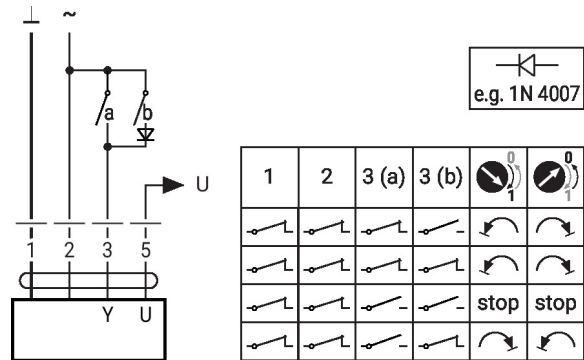

Caution:
 The "Close" function is only guaranteed if the start point of the operating range is defined as min. 0.5 V.

Operating controls and indicators

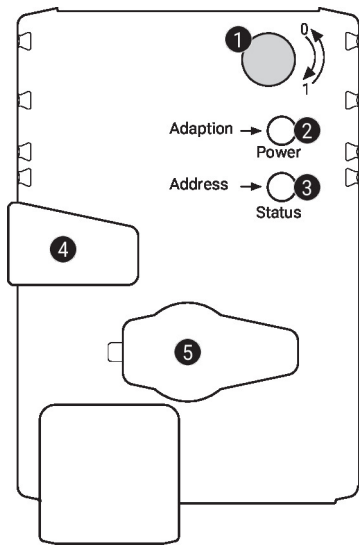

1 Direction of rotation switch

Switch over: Direction of rotation changes

2 Push-button and LED display green

Off: No power supply or malfunction
 On: In operation
 Press button: Triggers angle of rotation adaptation, followed by standard mode

3 Push-button and LED display yellow

Off: Standard mode
 On: Adaptation or synchronisation process active
 Flickering: MP-Bus communication active
 Flashing: Request for addressing from MP client
 Press button: Confirmation of the addressing

4 Manual override button

Press button: Gear train disengages, motor stops, manual override possible
 Release button: Gear train engages, synchronisation starts, followed by standard mode

5 Service plug

For connecting parametrisation and service tools


Check power supply connection

2 Off and **3** On Possible wiring error in power supply

Service

Tool connection The actuator can be parametrised by ZTH EU via the service socket. For an extended parametrisation the PC tool can be connected.

Connection ZTH EU / PC-Tool

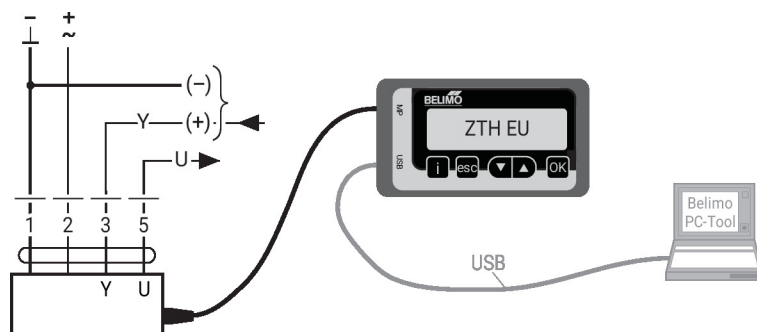

Dimensions


Spindle length

| | |
|--|--------------------|
| | Min. 40 |
| | Min. 20 mm [0.75"] |

Clamping range

| | 8...26.7 | ≥8 | ≤26.7 |
|--|----------|----|-------|
| | 8...20 | ≥8 | ≤20 |

*Option: Shaft clamp mounted below
(accessories K-NA needed)

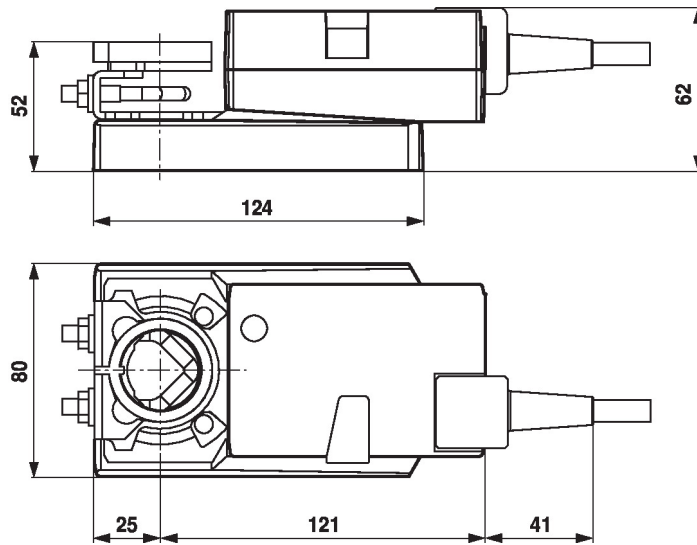

Further documentation

- Overview MP Cooperation Partners
- Tool connections
- Introduction to MP-Bus Technology

Application notes

- For digital control of actuators in VAV applications patent EP 3163399 must be considered.