

Technical data sheet

F7300-300SHP





Type overview

Туре	DN
F7300-300SHP	300

Technical data

Functional data	Valve size [mm]	12" [300]
	Fluid	chilled or hot water, up to 60% glycol
	Fluid Temp Range (water)	-22400°F [-30204°C]
	Body Pressure Rating	ANSI Class 300
	Flow characteristic	modified linear, unidirectional
	Servicing	maintenance-free
	Flow Pattern	3-way Mixing/Diverting
	Leakage rate	0%
	Controllable flow range	quarter turn, mechanically limited
	Cv	4837
	Maximum Velocity	32 FPS
	Lug threads	1 1/8-8 UNC
Materials	Valve body	Carbon steel full lug (ASME B16.34)
	Stem	17-4 PH stainless steel
	Seat	RPTFE
	Pipe connection	ASME/ANSI class 300 flange
	Bearing	glass backed PTFE
	Disc	316 stainless steel
Suitable actuators	Non-Spring	SY5
	-	SY7

Safety notes




• WARNING: This product can expose you to lead which is known to the State of California to cause cancer and reproductive harm. For more information go to www.p65warnings.ca.gov






Flow/Mounting details

SY4..6

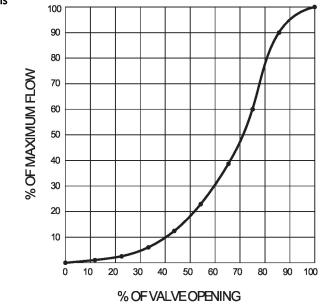


Dimensions

Туре	DN	Weight	
F7300-300SHP	300	771.8 lb [350 kg]	

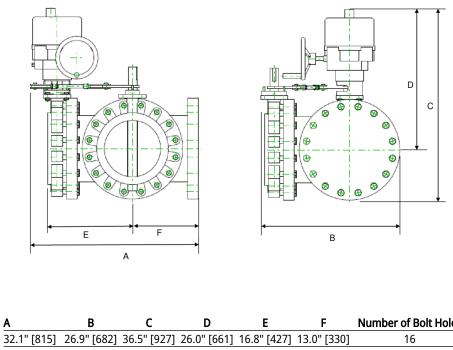

	D	Ľ	U	E	F	Number of Boil Holes
2.1" [815]	26.9" [682]	36.5" [927]	26.0" [661]	16.8" [427]	13.0" [330]	16



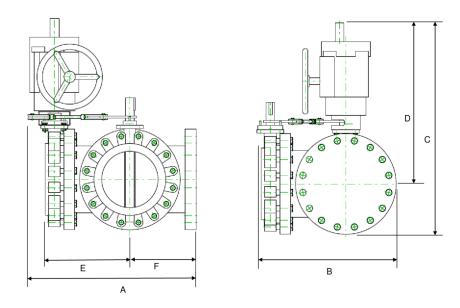



Α	В	С	D	Ε	F	Number of Bolt Holes
32.4" [822]	26.9" [682]	39.8" [1012]	29.6" [751]	16.8" [427]	13.0" [330]	16



MFT/programmable, Non fail-safe, 24 V





Technical data

Electrical data	Nominal voltage	AC/DC 24 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 21.626.4 V / DC 21.626.4 V
	Transformer sizing	214 VA
	Current consumption	8.9 A
	Auxiliary switch	2x SPDT, 1 mA5 A (3 A inductive), DC 5 VAC 250 V, 1 x 3° / 1 x 87°
	Switching capacity auxiliary switch	1 mA5 A (3 A inductive), DC 5 VAC 250 V
	Electrical Connection	Terminal blocks
	Overload Protection	thermally protected 135°C cut-out
	Internal Humidty Control	resistive heating element
Functional data	Torque motor	500 Nm
	Operating range Y	210 V
	Input impedance	100 kΩ
	Position feedback U	210 V
	Position feedback U note	Max. 0.5 mA
	Position feedback U variable	VDC variable
	Direction of motion motor	selectable with switch 0/1
	Manual override	hand wheel
	Angle of rotation	90°
	Running Time (Motor)	26 s
	Duty cycle value	75%
	Noise level, motor	45 dB(A)
	Position indication	top mounted domed indicator
Safety data	Degree of protection IEC/EN	IP66/67
	Degree of protection NEMA/UL	NEMA 4X
	Enclosure	UL Enclosure Type 4X
	Agency Listing	ISO, CE, cCSAus
	Quality Standard	ISO 9001
	Ambient humidity	Max. 100% RH
	Ambient temperature	-22149°F [-3065°C]
	Storage temperature	-40176°F [-4080°C]
	Servicing	maintenance-free
Weight	Weight	44 lb [20 kg]



Technical data	Tech	nnical	data
----------------	------	--------	------

Technical data		
Materials	Housing material die cast alu	uminium
	Gear train high alloy s	steel gear sets, self locking
Product features		
Application	SY Series actuators are fractional horsepower devices, and Observe wire sizing and transformer sizing requirements. P connected to Belimo direct coupled (AF, AM, GMetc) actual half-wave device. You MUST use a separate, dedicated trans the SY actuator. Please do not connect other automation ec source. You MUST use four wires (plus a ground) to control (See SY Wiring Section).	Proportional models CANNOT be ator power supplies or any type of sformer or power supply to power quipment to the dedicated SY supply
Accessories		
Gateways	Description	Туре
	Gateway MP to BACnet MS/TP	UK24BAC
	Gateway MP to Modbus RTU	UK24MOD
	Gateway MP to LonWorks	UK24LON
Electrical accessories	Description	Туре
	Battery backup system for SY45 series actuator, AC 24 V, N Service tool, with ZIP-USB function, for programmable and communicative Belimo actuators, VAV controller and HVAC devices	ZTH US
	Battery backup system for SY46 series actuator, AC 120 V,	on/off EXT-NSV-B03-120
	Battery backup system for SY46 series actuator, AC 120 V,	
	Battery backup system for SY45 series actuator, AC 24 V, o	on/off EXT-NSV-B13-24
Tools	Description	Туре
	Connecting cable 10 ft [3 m], A: RJ11 6/4 ZTH EU, B: 3-pin W supply connection	eidmüller and ZK4-GEN
	Service tool, with ZIP-USB function, for programmable and communicative Belimo actuators, VAV controller and HVAC devices	ZTH US performance

Electrical installation

X INSTALLATION NOTES

🛦 Do not change sensitivity or dip switch setting with power applied.

A Power supply Common/Neutral and Control Signal "-"wiring to a common is prohibited. Terminals 4 and 6 need to be wired separately.

🔬 Isolation relays must be used in parallel connection of multiple actuators using a common control signal inputs. The relays should be DPDT.

🔝 Isolation relays are required in parallel applications. The reason parallel applications need isolation relays is that the motor uses two sets of windings, one for each direction. When one is energized to turn the actuator in a specific direction a voltage is generated in the other due to the magnetic field created from the first. It's called back EMF. This is not an issue with one actuator because the voltage generated in the second winding isn't connected to anything so there is no flow. On parallel applications without isolation, this EMF voltage energizes the winding it is connected to on the other actuators in the system, the actuators are tying to turn in both directions at once. The EMF voltage is always less than the supply voltage due to the resistance of the windings, so while the actuator still turns in the commanded direction, the drag from the other reduces the torque output and causes overheating.

Warning! Live electrical components! 八

During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual



Technical data sheet

could result in death or serious injury.

who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components

