

Damper actuator for adjusting dampers in technical building installations

- Air damper size up to approx. 1 m²
- Torque motor 5 Nm
- Nominal voltage AC/DC 24 V
- Control Open/close, 3-point
- with integrated auxiliary switch
- PWIS/LABS-compliant according to VDMA 24364



Technical	data

Electrical data	Nominal voltage	AC/DC 24 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 19.228.8 V / DC 19.228.8 V
	Power consumption in operation	1 W
	Power consumption in rest position	0.2 W
	Power consumption for wire sizing	1.5 VA
	Auxiliary switch	1x SPDT, 0100%
	Switching capacity auxiliary switch	1 mA3 A (0.5 A inductive), DC 5 VAC 250 V
	Connection supply / control	Cable 1 m, 3x 0.75 mm ²
	Connection auxiliary switch	Cable 1 m, 3x 0.75 mm ²

Parallel operation

Functional data

Torque motor	5 Nm
Direction of motion motor	selectable with switch 0 (ccw rotation) / 1 (cw rotation)
Manual override	with push-button, can be locked
Angle of rotation	Max. 95°
Angle of rotation note	can be limited on both sides with adjustable mechanical end stops
Running time motor	150 s / 90°
Sound power level, motor	35 dB(A)
Mechanical interface	Universal shaft clamp 620 mm
Position indication	Mechanical, pluggable
D	TTT C f . F . I . W lt . (CFIN)

Yes (note the performance data)

Safety data

Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)	
Power source UL	Class 2 Supply	
Protection class auxiliary switch IEC/EN	II, reinforced insulation	
Degree of protection IEC/EN	IP54	
Degree of protection NEMA/UL	NEMA 2	
Enclosure	UL Enclosure Type 2	
EMC	CE according to 2014/30/EU	
Low voltage directive	CE according to 2014/35/EU	
Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14	
UL Approval	cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1 The UL marking on the actuator depends on	
	the production site, the device is UL-compliant in any case	



Technical data

Safety data	PWIS/LABS-conformity	According to VDMA 24364 (test class C1) Approved for use in zone II Cleaning with low-pressure plasma treatment
	Hygiene test	According to VDI 6022 Part 1 / SWKI VA 104-01, cleanable and disinfectable, low emission
	Type of action	Type 1.B
	Rated impulse voltage supply / control	0.8 kV
	Rated impulse voltage auxiliary switch	2.5 kV
	Pollution degree	3
	Ambient humidity	Max. 95% RH, non-condensing
	Ambient temperature	-3050°C [-22122°F]
	Storage temperature	-1040°C [14104°F]
	Servicing	maintenance-free
Weight	Weight	0.54 kg

Safety notes



Manual override

- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or
 aggressive gases interfere directly with the device and that it is ensured that the ambient
 conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- Cables must not be removed from the device.
- To calculate the torque required, the specifications supplied by the damper manufacturers
 concerning the cross-section and the design, as well as the installation situation and the
 ventilation conditions must be observed.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.
- PWIS/LABS-conformity is guaranteed as long as the packaging is unopened. Once the PWIS/ LABS-compliant packaging has been opened, the proper handling of the products is the responsibility of the customer. PWIS/LABS-conformity of unopened products is guaranteed for a period of one year after cleaning, provided they are handled properly, professionally and cleanly. Proof of proper, professional and clean handling is the responsibility of the purchaser. Ensure that the required cleanliness of the products is maintained. Do not touch the products with bare hands. Belimo accepts no liability for the consequences resulting from the contamination of a product caused by the customer.

Product features

Simple direct mounting Simple direct mounting on the damper shaft with a universal shaft clamp, supplied with an anti-rotation device to prevent the actuator from rotating.

Manual override with push-button possible (the gear train is disengaged for as long as the button is pressed or remains locked).

Adjustable angle of rotation Adjustable angle of rotation with mechanical end stops.

Flexible signalling With adjustable auxiliary switch (0...100%)



Accessories

Electrical accessories	Description	Туре
	Auxiliary switch 1x SPDT add-on	S1A
	Auxiliary switch 2x SPDT add-on	S2A
	Feedback potentiometer 140 Ω add-on	P140A
	Feedback potentiometer 1 kΩ add-on	P1000A
	Feedback potentiometer 10 kΩ add-on	P10000A
Mechanical accessories	Description	Туре
	Shaft extension 170 mm ø10 mm for damper shaft ø616 mm	AV6-20
	Shaft clamp one-sided, clamping range ø620 mm, Multipack 20 pcs.	K-ELA
	Shaft clamp one-sided, clamping range ø610 mm, Multipack 20 pcs.	K-ELA10
	Shaft clamp one-sided, clamping range ø613 mm, Multipack 20 pcs.	K-ELA13
	Shaft clamp one-sided, clamping range ø616 mm, Multipack 20 pcs.	K-ELA16
	Anti-rotation mechanism 180 mm, Multipack 20 pcs.	Z-ARS180
	Form fit insert 8x8 mm, Multipack 20 pcs.	ZF8-LMA
	Form fit insert 10x10 mm, Multipack 20 pcs.	ZF10-LMA
	Form fit insert 12x12 mm, Multipack 20 pcs.	ZF12-LMA
	Form fit insert 8x8 mm, with angle of rotation limiter and position	ZFRL8-LMA
	indication, Multipack 20 pcs. Form fit insert 10x10 mm, with angle of rotation limiter and position indication, Multipack 20 pcs.	ZFRL10-LMA
	Form fit insert 12x12 mm, with angle of rotation limiter and position indication, Multipack 20 pcs.	ZFRL12-LMA
	Position indicator, Multipack 20 pcs.	Z-PI

Electrical installation



Supply from isolating transformer.

Parallel connection of other actuators possible. Observe the performance data.

Wire colours:

1 = black

2 = red

3 = white


S1 = violet


S2 = red


S3 = white

Wiring diagrams


AC/DC 24 V, open/close





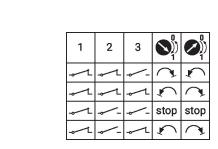








Operating controls and indicators

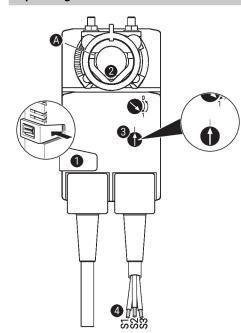

Auxiliary switch settings

<u>^</u>

Note: Perform settings on the actuator only in deenergised state.

For the auxiliary switch position settings, carry out points 1 to 4 successively.

Manual override button

Holding button pressed down: Gear train disengages. Manual override is possible.

2 Shaft clamp

Turn until edge line (A) displays the desired switching position of the actuator and release button (1).

3 Auxiliary switch

Turn rotary knob until the arrow points to the vertical line.


4 Cable

Connect continuity tester to S1 + S2 or to S1 + S3.

If the auxiliary switch should switch in the opposite direction, rotate the auxiliary switch by 180°.

Dimensions

Spindle length



Clamping range

OI		♦ I
620	≥6	≤20

