

Type Overview

Differential pressure sensor Air

Differential pressure transmitter with 8 selectable ranges and Modbus funtionality. For monitoring over-, under or the differential pressure of air and other non-flammable and non-aggressive gases. Typical application in HVAC systems for monitoring air filters, fans V-belts or fire and smoke control dampers. Options available with LCD display. IP65 / NEMA 4X rated enclosure.







| Туре | Measuring range [Pa] | Commu | nication | Output signal active pressure | Output signal activ | e Burst pressure | Display type |
|----------------|-------------------------|----------|----------------------------|-------------------------------|------------------------|---|-----------------|
| 22ADP-156 | 07000 | Modb | us RTU | 05 V, 010 V | 05 V, 010 V | 40 kPa | - |
| 22ADP-156L | 07000 | Modb | us RTU | 05 V, 010 V | 05 V, 010 V | 40 kPa | LCD |
| Technical data | | | | | | | |
| | Electrical data | | Nomina | l voltage | AC | ′DC 24 V | |
| | | | Nominal voltage range | | AC | AC 1929 V / DC 1535 V | |
| | | | Power o | onsumption AC | 4.3 | VA | |
| | | | Power consumption DC 2.3 W | | | | |
| | | | Electrical connection | | | Pluggable spring loaded terminal block max 2.5 mm ² | |
| | | | Cable entry | | Cal | Cable gland with strain relief 2x ø6 mm | |
| | Data bus communication | | Communication | | Мо | Modbus RTU | |
| | | | Numbe | r of nodes | Мо | dbus see interface des | cription |
| | Functional data | | Application | | Air | Air | |
| | | | Multira | nge | 8 m | neasuring ranges selec | table |
| | | | Voltage | output | 2 x | 05 V, 010 V, min. re | esistance 10 kΩ |
| | | | Output | signal active note | Ou | tput 05/10 V selectab | le with switch |
| | | | Display | | wit Me (pa Me | D, 29x35 mm h backlight asured values volumet rametrisable) asured values pressure rametrisable) | |
| | | | Typical | response time | Adj | ustable 0.8 s or 4.0 s | |
| | Measuring data | | Measured values | | | Differential pressure Volumetric flow | |
| | | | Measur | ing fluid | Air | and non-aggressive ga | ises |
| | Specificati | ion Flow | Measur | ing range volumetric fl | Def | ustable via Modbus fault setting: 0750'00 ectable units: m³/h, m³ | |

Specification Pressure

Sensing element technology

Piezo measuring element



Technical data

| Specification Pressure | Measuring range pressure settings | Setting Range [Pa] Range [inch WC] Factor | |
|------------------------|-----------------------------------|--|--|
| | | setting | |
| | | S0 07000 028 | |
| | | S1 05000 020 | |
| | | S2 04000 016 | |
| | | S3 03000 012 | |
| | | \$4 02500 010 \$5 02000 08 | |
| | | S5 02000 08 S6 01500 06 | |
| | | S7 01000 04 | |
| | Accuracy | Deviation compared to the reference device | |
| | Accuracy | measuring range ≤2000 Pa: ±10 Pa | |
| | | measuring range >2000 Pa: ±25 Pa | |
| | Long term stability | ±2.5% FSO (Full Scale Output) / 4 yr. | |
| Safety data | Protection class IEC/EN | III, Safety Extra-Low Voltage (SELV) | |
| | Power source UL | Class 2 Supply | |
| | Degree of protection IEC/EN | IP65 | |
| | Degree of protection NEMA/UL | NEMA 4X | |
| | Enclosure | UL Enclosure Type 4X | |
| | EU Conformity | CE Marking | |
| | Certification IEC/EN | IEC/EN 60730-1 and IEC/EN 60730-2-6 | |
| | Quality Standard | ISO 9001 | |
| | UL Approval | cULus acc. to UL60730-1A/-2-6, CAN/CSA | |
| | | E60730-1 | |
| | Type of action | Type 1 | |
| | Rated impulse voltage supply | 0.8 kV | |
| | Pollution degree | 3 | |
| | Ambient humidity | Max. 95% RH, non-condensing | |
| | Ambient temperature | -1050°C [14122°F] | |
| | Fluid temperature | -1050°C [15120°F] | |
| Materials | Housing | Cover: PC, orange | |
| | | Bottom: PC, orange | |
| | | Seal: NBR70, black | |
| | | UV resistant | |
| | Cable gland | PA6, black | |
| | Cable gland | PA6, black | |

Safety notes



This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application. Unauthorised modifications are prohibited. The product must not be used in relation with any equipment that in case of a failure may threaten humans, animals or assets.

Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.

The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.



Remarks

Manual zero-point calibration

After initial commissioning

To carry out the zero-point calibration, the device must be connected to the power supply at least 15 minutes beforehand.

Calibration interval

≤250 Pa 3 months

≤500 Pa 6 months

>500 Pa 12 months

Procedure

• Release both tube connectors from the pressure ports + and -


(Carry out the manual zero-point calibration even if the display shows 0.)

- Press the button "Manual zero-point calibration" until the LED lights permanently
- Wait until the LED flashes again and reinstall the tube connectors to the pressure ports (pay attention to + and -)

Indicators and Operation

Indicators

Depending on the device and the number of measured values, the display automatically scales. Parameters, such as the fading in/out of measured values, brightness and traffic light function, are changed via the app or bus system. During the boot process, the software and hardware versions are displayed.

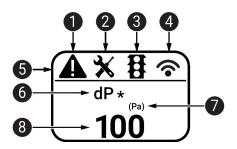

- 1 Fault / sensor failure
- 2 Service / visual inspection due
- 3 TLF (traffic light function) active (thresholds for display colour changes)
- 4 Radio active (not available)
- Status bar
- 6 Measured value (* appears when TLF function is activated for this value)
- Unit of measure
- 8 Measured value

Parts included

| Description | Туре |
|---|------------|
| Mounting plate L housing | A-22D-A10 |
| Duct connector kit, PVC tube 2 m, 2x duct connector (plastic) for 22ADP | A-22AP-A08 |
| Cable Gland with strain relief ø68 mm Dowels Screws | |

Accessories

| Optional accessories | Description | Туре |
|----------------------|--|-------------|
| | Duct connector, Metal, L 40 mm, Tube connection 5 mm | A-22AP-A02 |
| | Duct connector, Metal, L 100 mm, Tube connection 5 mm | A-22AP-A04 |
| | Connection adapter flex conduit, M20x1.5, for cable gland 1x 6 mm, | A-22G-A01.1 |
| | Multipack 10 pcs. | |
| | Connection adapter flex conduit, M20, for cable gland 2x 6 mm, | A-22G-A02.1 |
| | Multipack 10 pcs. | |



Accessories

| Tools | Description | Туре | | | |
|-------|---|------------------|--|--|--|
| | Belimo Duct Sensor Assistant App | Belimo Duct | | | |
| | | Sensor Assistant | | | |
| | | Арр | | | |
| | Bluetooth dongle for Belimo Duct Sensor Assistant App | A-22G-A05 | | | |
| | * Bluetooth dongle A-22G-A05 | | | | |
| | Certified and available in North America, European Union, EFTA States and UK. | | | | |

Service

Tools connection

This sensor can be operated and parametrised using the Belimo Duct Sensor Assistant App. When using the Belimo Duct Sensor Assistant App, the bluetooth dongle is required to enable

communication between the app and the Belimo sensor.


For the standard operation and parametrisation of the sensor the bluetooth dongle and the Belimo Duct Sensor Assistant App are not needed. The sensor will arrive pre-configured with the factory default settings shown above.

Requirement:

- Bluetooth dongle (Belimo Part No: A-22G-A05)
- Bluetooth-capable smartphone
- Belimo Duct Sensor Assistant App (Google Play & Apple App Store)

Procedure:

- Plug the Bluetooth dongle into the sensor via the Micro-USB connector or by means of the interface PCB
- Connect Bluetooth-capable smartphone with Bluetooth dongle
- Select parametrisation in the Belimo Duct Sensor Assistant App

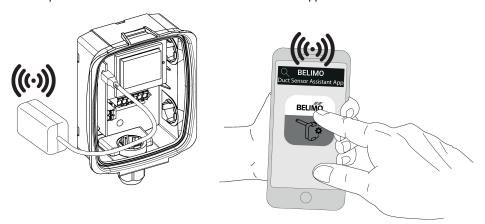

Wiring diagram




Supply from isolating transformer.

The wiring of Modbus RTU (RS-485) is to be carried out in accordance with applicable regulations (www.modbus.org). The device has switchable resistors for bus termination.

Modbus / BACnet: Supply and communication are not galvanically isolated. Connect earth signal of the devices with one another.



Wiring diagram

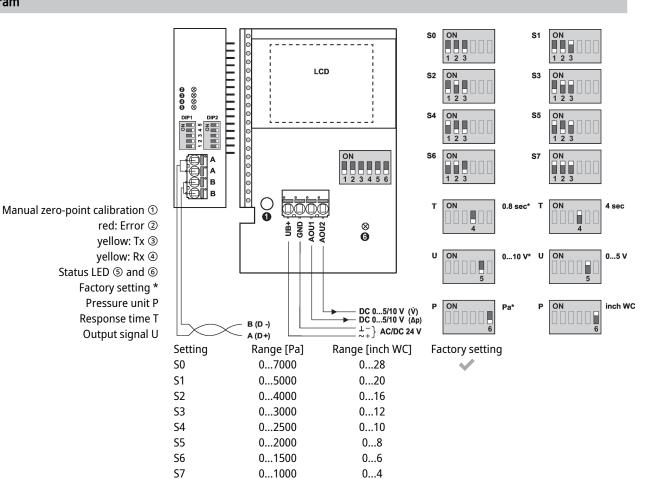

Detailed documentation

The separate document Sensor Modbus-Register informs about Modbus register, addressing, parity and bus termination (DIP1: address, DIP2: baud rate, parity, bus termination)

In addition to the information on the bus, the following analogue outputs are available:

AOU1: differential pressure


AOU2: volumetric flow

The volumetric flow is calculated from the differential pressure, the k-factor and the height above sea level.

Factory setting for the k-factor is 1.00 and for the height above sea level 330 metres.


The values of the k-factor and the height can be changed via bus system.


Wiring RS-485 Modbus RTU

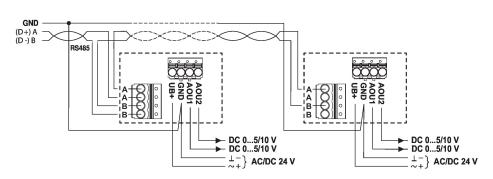



Dimensions

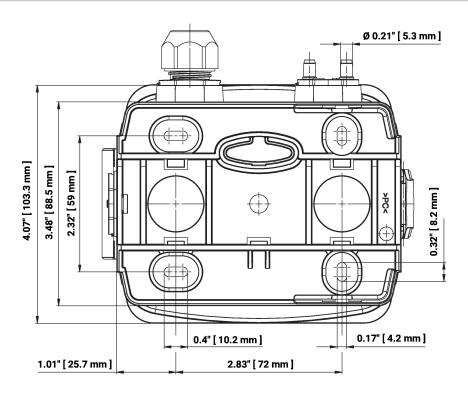

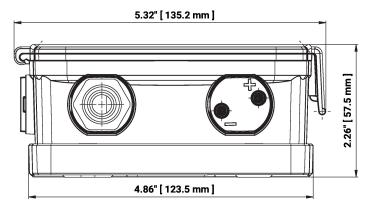

| Туре | Weight |
|------------|---------|
| 22ADP-156 | 0.40 kg |
| 22ADP-156L | 0.41 kg |

Further documentation

- Modbus Interface description
- Installation instructions