



Differential pressure sensor Air

Differential pressure transmitter with 8 selectable ranges and outputs 0...5 V, 0...10 V or 4...20 mA. For monitoring the differential pressure of air and other non-flammable and non-aggressive gases. Typical application in HVAC systems for monitoring air filters, fans Vbelts as well as the use in pressure differential systems. Options available with LCD display, auto-zero feature. IP65 / NEMA 4X rated enclosure.





Type Overview

Туре	Measuring range [Pa]	Output signal active pressure	Burst pressure	Display type	Additional features
22ADP-18Q	-150250	05 V, 010 V, 420 mA	40 kPa	-	-
22ADP-18QA	-150250	05 V, 010 V, 420 mA	40 kPa	-	Auto-Zero
22ADP-18QB	-150250	05 V, 010 V, 420 mA	40 kPa	LCD	Auto-Zero
22ADP-18QL	-150250	05 V, 010 V, 420 mA	40 kPa	LCD	-

Technical data

Electrical data	Nominal voltage	AC/DC 24 V	
	Nominal voltage range	AC 1929 V / DC 1535 V	
	Power consumption AC	4.3 VA	
	Power consumption DC	2.3 W	
	Electrical connection	Pluggable spring loaded terminal block max. 2.5 mm ²	
	Cable entry	Cable gland with strain relief ø68 mm	
Functional data	Application	Air	
	Multirange	8 measuring ranges selectable	
	Voltage output	1 x 05 V, 010 V, min. resistance 10 k Ω	
	Current output	1x 420 mA, max. resistance 500 Ω	
	Output signal active note	Output 05/10 V selectable with switch	
	Display	LCD, 29x35 mm	
		with backlight	
		Measured values: Pa, inch WC	
		(parametrisable)	
	Typical response time	Adjustable 0.8 s or 4.0 s	
Measuring data	Measured values	Differential pressure Volumetric flow (with A-22G-A05)	
	Managering fluid		
	Measuring fluid	Air and non-aggressive gases	
Specification Pressure	Sensing element technology	Piezo measuring element	





Tec	hni	ical	da	ta

Specification Pressure	Measuring range pressure settings	Setting Range [Pa] Range [inch WC] Factory
		setting
		S0 0250 01
		S1 0100 00.4
		S2 050 00.2
		S3 025 00.1 S4 -2525 -0.10.1
		S4 -2525 -0.10.1 S5 -5050 -0.20.2
		S6 -100100 -0.40.4
		S7 -150150 -0.60.6
	Accuracy	Deviation compared to the reference device
		±1 Pa at range <250 Pa
	Long term stability	±2.5% FSO (Full Scale Output) / 4 yr.
Safety data	Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)
	Power source UL	Class 2 Supply
	Degree of protection IEC/EN	IP65
	Degree of protection NEMA/UL	NEMA 4X
	Enclosure	UL Enclosure Type 4X
	EU Conformity	CE Marking
	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-6
	Quality Standard	ISO 9001
	UL Approval	cULus acc. to UL60730-1A/-2-6, CAN/CSA
		E60730-1
	Type of action	Туре 1
	Rated impulse voltage supply	0.8 kV
	Pollution degree	3
	Ambient humidity	Max. 95% RH, non-condensing
	Ambient temperature	-1050°C [14122°F]
	Fluid temperature	-1050°C [15120°F]
Materials	Cable gland	PA6, black
	Housing	Cover: PC, orange
		Bottom: PC, orange
		Seal: NBR70, black
		UV resistant

Safety notes



This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application. Unauthorised modifications are prohibited. The product must not be used in relation with any equipment that in case of a failure may threaten humans, animals or assets.

Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.

The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.



Remarks		
Automated zero-point calibration (Auto Zero)	Transmitters equipped with the auto-zero calibration are maintenanc	e-free.
	The auto-zero calibration electronically adjusts the transmitter zero er function eliminates all output signal drift due to thermal, electronic o auto-zero adjustment takes approx. 4 seconds after which the device measuring mode. During the 4 second adjustment period, the output freeze to the latest measured value.	r mechanical effects. The returns to its normal
Manual zero-point calibration	After initial commissioning	
	To carry out the zero-point calibration, the device must be connected least 15 minutes beforehand.	to the power supply at
	Calibration interval	
	≤250 Pa 3 months	
	Procedure	
	• Release both tube connectors from the pressure ports + and -	
	(Carry out the manual zero-point calibration even if the display shows	
	• Press the button "Manual zero-point calibration" until the LED lights	
• Wait until the LED flashes again and reinstall the tube connectors to the attention to + and -)		the pressure ports (pay
Indicators and Operation		
 Indicators Depending on the device and the number of measured values, the display automatically scales. Parameters, such as the fading in/out of measured values, brightness and traffic ligh function, are changed via the app or bus system. During the boot process, the software an hardware versions are displayed. Fault / sensor failure Service / visual inspection due TLF (traffic light function) active (thresholds for display colour changes) Radio active (not available) Status bar Measured value (* appears when TLF function is activated for this value) Unit of measure Measured value 		
	Description	Turne
	Description Mounting plate L housing Duct connector kit, PVC tube 2 m, 2x duct connector (plastic) for 22ADP Dowels Screws	Type A-22D-A10 A-22AP-A08
Accessories		
Optional accessories	Description	Туре
	Duct connector, Metal, L 40 mm, Tube connection 5 mm Duct connector, Metal, L 100 mm, Tube connection 5 mm	A-22AP-A02 A-22AP-A04





Descript	ion	Туре
Connect	ion adapter flex conduit, M20x1.5, for cable gland 1x 6 mm,	A-22G-A01.1
•	k 10 pcs.	
	olume probe 100 mm for round duct, min. 2 m/s, Probe	EXT-AC-R100
length 1		
Airflow v length 1	olume probe 125 mm for round duct, min. 2 m/s, Probe 25 mm	EXT-AC-R125
Airflow v length 1	olume probe 160 mm for round duct, min. 2 m/s, Probe 60 mm	EXT-AC-R160
Airflow v length 2	olume probe 200 mm for round duct, min. 2 m/s, Probe 00 mm	EXT-AC-R200
0	olume probe 250 mm for round duct, min. 2 m/s, Probe	EXT-AC-R250
	olume probe 315 mm for round duct, min. 2 m/s, Probe	EXT-AC-R315
-	olume probe 400 mm for round duct, min. 2 m/s, Probe	EXT-AC-R400
5	olume probe 500 mm for round duct, min. 2 m/s, Probe	EXT-AC-R500
	olume probe 630 mm for round duct, min. 2 m/s, Probe	EXT-AC-R630
0	olume probe 200 mm for rectangular duct, min. 2 m/s, Probe	EXT-AC-L200
	olume probe 250 mm for rectangular duct, min. 2 m/s, Probe	EXT-AC-L250
5	olume probe 300 mm for rectangular duct, min. 2 m/s, Probe	EXT-AC-L300
	olume probe 400 mm for rectangular duct, min. 2 m/s, Probe	EXT-AC-L400
5	olume probe 500 mm for rectangular duct, min. 2 m/s, Probe	EXT-AC-L500
5	olume probe 600 mm for rectangular duct, min. 2 m/s, Probe	EXT-AC-L600
	olume probe 700 mm for rectangular duct, min. 2 m/s, Probe	EXT-AC-L700
Descript		Туре
· ·	Duct Sensor Assistant App	Belimo Duct
		Sensor Assista
		Арр
Diveteet	h dongle for Belimo Duct Sensor Assistant App	A-22G-A05

* Bluetooth dongle A-22G-A05

Certified and available in North America, European Union, EFTA States and UK.





~	•
LAP	1000
Ser	vice

Tools connectionThis sensor can be operated and parametrised using the Belimo Duct Sensor Assistant App.When using the Belimo Duct Sensor Assistant App, the bluetooth dongle is required to enable
communication between the app and the Belimo sensor.


For the standard operation and parametrisation of the sensor the bluetooth dongle and the Belimo Duct Sensor Assistant App are not needed. The sensor will arrive pre-configured with the factory default settings shown above.

Requirement:

- Bluetooth dongle (Belimo Part No: A-22G-A05)
- Bluetooth-capable smartphone
- Belimo Duct Sensor Assistant App (Google Play & Apple App Store)

Procedure:

- Plug the Bluetooth dongle into the sensor via the Micro-USB connector or by means of the interface PCB
- Connect Bluetooth-capable smartphone with Bluetooth dongle
- Select parametrisation in the Belimo Duct Sensor Assistant App

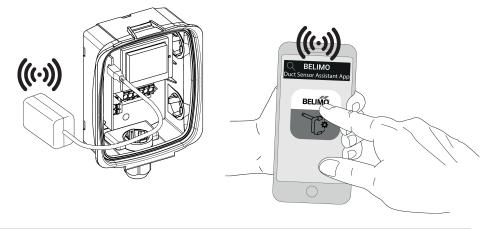


Wiring diagram



When switching from 0...10 V to 0...5 V output voltage also the current will be adjusted from 4...20 mA to 4...12 mA.




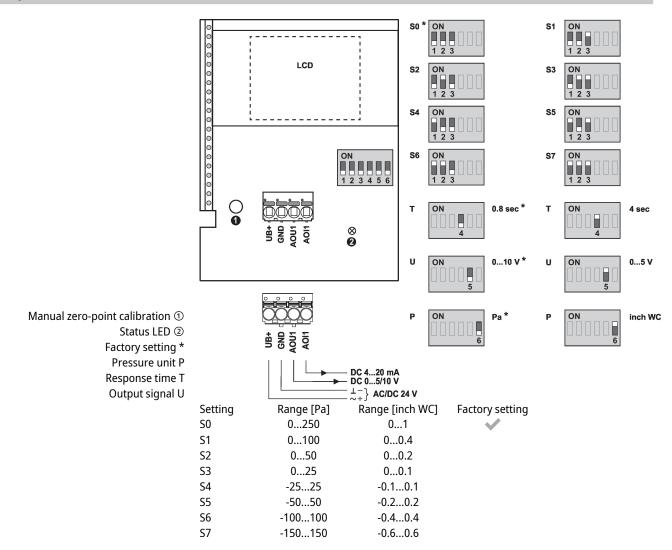

Wiring note power supply AC


For the sensor to function properly, polarity must be observed with a DC supply as well as an AC supply.


If the AC supply is connected incorrectly, i.e. if the wires are reversed, this can lead to the destruction of the sensor.

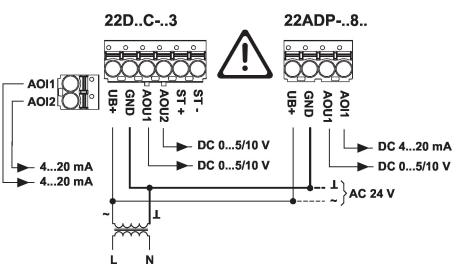



Dimensions

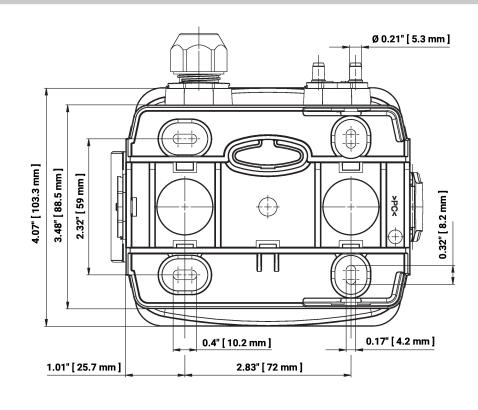

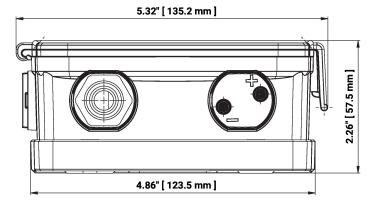

Further documentation

• Installation instructions