

VAV-Compact unit – with VAV controller, static Ap sensor (membrane) and damper actuator

- Field of application: VAV units in comfort applications or ventilation systems with contaminated air
- Application: VAV/CAV, position control
- Belimo M1, static diaphragm sensor
- Functional range differential pressure 0...600 Pa
- Control communicative, modulating (0/2...10 V)
- Communication via Belimo MP-Bus
- Conversion of sensor signals
- Tool connection: Service socket, NFC interface



Technical data

| | | |
|-------------------------------|--|--|
| Electrical data | Nominal voltage | AC/DC 24 V |
| | Nominal voltage frequency | 50/60 Hz |
| | Nominal voltage range | AC 19.2...28.8 V / DC 21.6...28.8 V |
| | Power consumption in operation | 3 W |
| | Power consumption in rest position | 1.5 W |
| | Power consumption for wire sizing | 5 VA |
| | Power consumption for wire sizing note | I_{max} 8 A @ 5 ms |
| | Connection supply / control | Cable 1 m, 4x 0.75 mm ² |
| Data bus communication | Communicative control | MP-Bus |
| | Number of nodes | MP-Bus max. 8 |
| Functional data | Torque motor | 10 Nm |
| | Operating range Y | 2...10 V |
| | Input impedance | 100 k Ω |
| | Operating range Y variable | 0...10 V |
| | Position feedback U | 2...10 V |
| | Position feedback U note | Max. 0.5 mA |
| | Position feedback U variable | Start point 0...8 V End point 2...10 V |
| | V'max adjustable | 20...100% of V'nom |
| | V'mid adjustable | >V'min...<V'max |
| | V'min adjustable | 0...100% of V'nom (<V'max) |
| | Manual override | with push-button, can be locked |
| | Angle of rotation | 95° |
| | Angle of rotation note | adjustable mechanical or electrical limitation |
| | Mechanical interface | Universal shaft clamp 8...26.7 mm |
| Position indication | Mechanical | |
| Measuring data | Measuring principle | Belimo M1, static diaphragm sensor |
| | Installation orientation | position-independent, no zeroing necessary |
| | Functional range differential pressure | 0...600 Pa |
| | Maximum system pressure | 1500 Pa |
| | Burst pressure | \pm 7 kPa |
| | Height compensation | Adjustment of system height (range 0...3000 m above sea level) |
| | Condition measuring air | 0...50°C / 5...95% RH, non-condensing |

Technical data

| | | |
|-----------------------|--|--|
| Measuring data | Pressure tube connection | Nipple diameter 5.3 mm |
| Safety data | Protection class IEC/EN | III, Protective Extra-Low Voltage (PELV) |
| | Degree of protection IEC/EN | IP54 |
| | Degree of protection NEMA/UL | NEMA 2 |
| | Housing | UL Enclosure Type 2 |
| | EMC | CE according to 2014/30/EU |
| | Certification IEC/EN | IEC/EN 60730-1 and IEC/EN 60730-2-14 |
| | Type of action | Type 1 |
| | Rated impulse voltage supply / control | 0.8 kV |
| | Pollution degree | 3 |
| | Ambient humidity | Max. 95% RH, non-condensing |
| | Ambient temperature | 0...50°C [32...122°F] |
| | Storage temperature | -20...80°C [-4...176°F] |
| | Servicing | maintenance-free |
| Weight | Weight | 0.74 kg |

Safety notes


- The device must not be used outside the specified field of application, especially not in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the device and that it is ensured that the ambient conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- Cables must not be removed from the device.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product features

Application The VAV-Compact unit is used for both comfort applications and sensitive operating ranges with contaminated media for pressure-independent control of VAV units. See Technical brochure – VAV-Compact product range for volumetric flow applications.

Pressure measurement

The integrated M1 differential pressure sensor is also suitable for very small volumetric flows. The maintenance-free sensor technology enables a wide range of applications in the HVAC comfort area such as in residential buildings, offices, hotels, etc.

Actuators

For the various applications and damper designs, various actuator variants with torque 5 or 10 Nm are available to the VAV unit manufacturer.

Control functions

Volumetric flow (VAV/CAV) or position control (Open Loop)

Product features

Application Variable Air Volume (VAV) Variable air volume control in the V'min...V'max range, demand-dependent via a modulating reference variable (analogue or bus), e.g. room temperature or CO₂ controller for energy-saving air conditioning of individual rooms or zones.

V'nom, Δp @ V'nom

OEM-specific calibration parameters, suitable for the VAV unit

Adjustment range Δp @ V'nom: 38...450 Pa

V'max (Max)

Maximum operating volumetric flow, adjustable 20...100% V'nom

V'min (Min)

Minimum operating volumetric flow, adjustable 0...100% V'nom

Application Constant Air Volume (CAV) Constant volumetric flow control. If required, via step switching (switching contacts) for constant volumetric flow applications.

Steps: CLOSE / Min / Max / OPEN (Mid)

Application Position Control (Open Loop) Position control for integration of the VAV-Compact into an external VAV control loop. Transmitter and actuator unit.

Max

Range: 20...100 % rotation range

Min

Range: 0...100 % rotation range


Demand Controlled Ventilation (DCV) Output of the demand signal (damper position) to the higher-level automation system – DCV function.

Bus operation Thanks to its MP-Bus functionality, the VAV-Compact can be easily integrated into a MP-Bus system. The communication interface and MP address is defined using service tools.

In bus mode, a sensor (0...10 V / passive) can optionally be connected, e.g. a temperature sensor or a switching contact, for integration into the higher-level bus system.

Operating settings Control functions
Volumetric flow (VAV/CAV) or position control (Open Loop)

Operating settings Min/Max/Nom

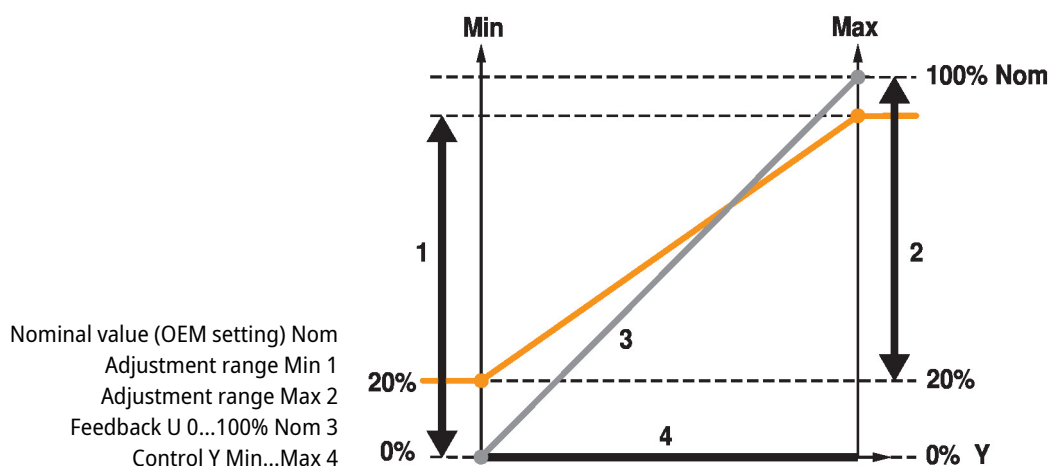

Operating and service tools Belimo Assistant 2 or ZTH EU

Accessories

| Tools | Description | Type |
|------------------------|---|--------------------|
| | Service tool for wired and wireless setup, on-site operation, and troubleshooting. | Belimo Assistant 2 |
| | Converter Bluetooth / NFC | ZIP-BT-NFC |
| | Service tool, with ZIP-USB function, for parametrisable and communicative Belimo actuators, VAV controller and HVAC performance devices | ZTH EU |
| | Connecting cable 5 m, A: RJ11 6/4 ZTH EU, B: 6-pin for connection to service socket | ZK1-GEN |
| | Connecting cable 5 m, A: RJ11 6/4 ZTH EU, B: free wire end for connection to MP/PP terminal | ZK2-GEN |
| Electrical accessories | Description | Type |
| | Positioner for wall mounting | CRP24-B1 |
| | Positioner for wall mounting | SGA24 |
| Gateways | Description | Type |
| | Gateway MP to BACnet MS/TP | UK24BAC |
| | Gateway MP to Modbus RTU | UK24MOD |


Electrical installation



Supply from isolating transformer.

Wire colours:


- 1 = black
- 2 = red
- 3 = white
- 5 = orange

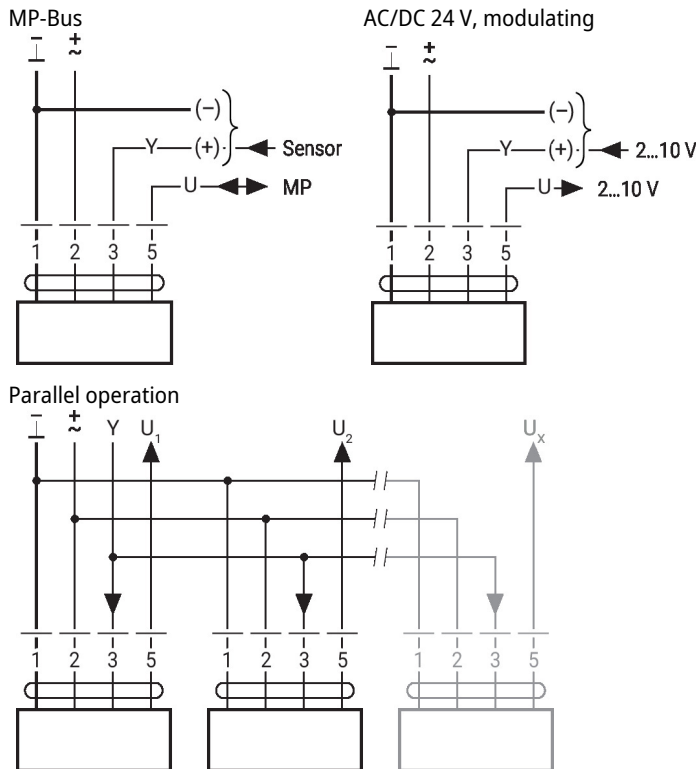

- Max. 8 actuators in parallel
- Parallel operation is permitted only on non-connected axes
- Do not fail to observe performance data with parallel operation

Electrical installation


Primary/secondary operation

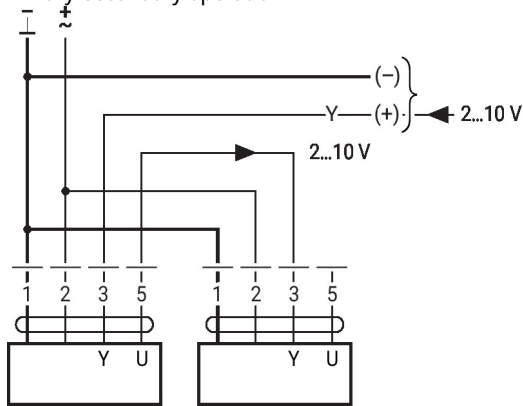

Further electrical installations


MP-Bus

Connection on the MP-Bus

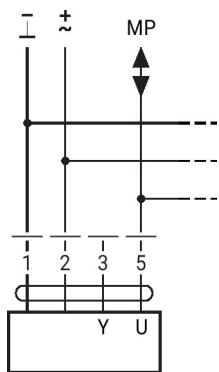


Max. 8 MP-Bus nodes

Connection of active sensors

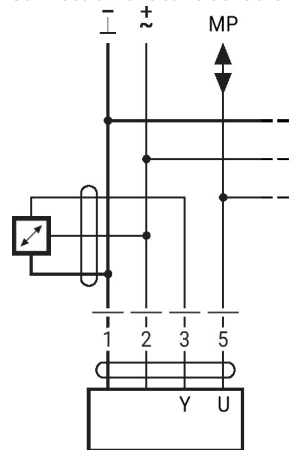

- Supply AC/DC 24 V
- Output signal 0...10 V (max. 0...32 V)
- Resolution 30 mV

Connection of external switching contact

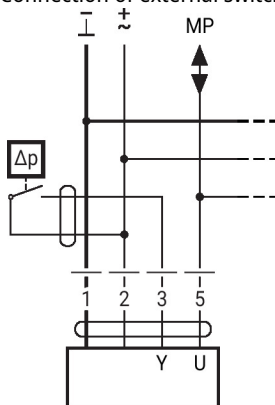


- Switching current 16 mA @ 24 V
- Start point of the operating range must be parametrised on the MP actuator as ≥ 0.5 V

Further electrical installations

MP-Bus


Connection of passive sensors

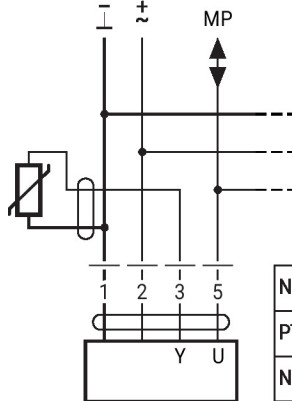

- 1) Depending on the type
 - 2) Resolution 1 Ohm
- Compensation of the measured value is recommended


Functions with specific parameters (Parametrisation necessary)

CAV function, Belimo Assistant 2 setting: CLOSE - V'min - V'max (shut-off level 0.1 V)

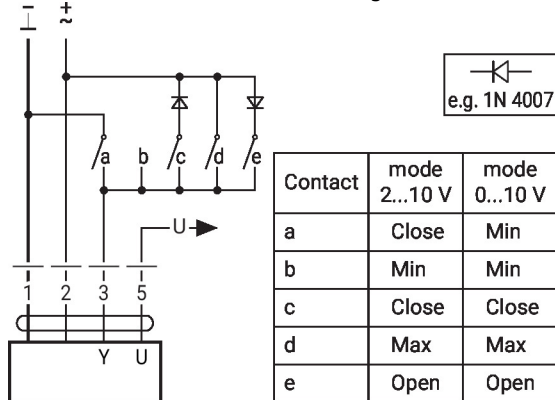

- Note that the contacts are mutually interlocking
- DC 24 V supply: option c and d not available
- Setting for CAV application: mode 2...10 V, shut-off level 0.1 V

CAV function, Belimo Assistant 2 setting: CLOSE - V'min - V'mid - V'max (NMV-D2M-compatible)

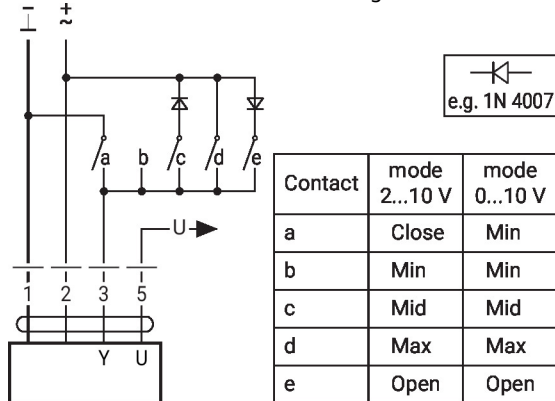

- Note that the contacts are mutually interlocking
- Setting parameters for CAV application: V'min - V'mid - V'max (NMV-D2M-compatible)

Parameter and tool overview

Settings and tool function

| Designation | Setting values, limits, explanations | Units | Tool | | | Remarks |
|--|--|-------------------------------|-------------------|---------------------|-------------------|--|
| | | | ZTH EU | PC-Tool | Assistant app | |
| System-specific data | | | | | | |
| Position | 16 characters, e.g. Office 4 6th OG ZL | String | r | r/w | r/w | |
| Designation | 16 characters: Unit designation, etc. | String | r | r/w ¹⁾ | r | |
| Address | PP / MP1...8 | | r/w | r/w | r/w ²⁾ | PP: 0...10 / 2...10 V MP1...8: MP mode |
| V'_{max} | 20...100% [V'_{nom}] | m ³ /h / l/s / cfm | r/w | r/w | r/w | $\geq V'_{min}$ |
| V'_{mid} | V'_{min} ... V'_{max} | m ³ /h / l/s / cfm | r/w | r/w | r/w | |
| V'_{min} | 0...100% [V'_{nom}] | m ³ /h / l/s / cfm | r/w | r/w | r/w | $\leq V'_{max}$ |
| Altitude of installation | 0...3000 | m | r/w | r/w | r/w | Adaptation of Δp sensor to altitude (meters above sea level) |
| Controller Settings | | | | | | |
| Control function | Volumetric flow / Position control (Open Loop) | | – | r/w | r/w ²⁾ | |
| Mode | 0...10 / 2...10 | V | r/w ²⁾ | r/w | r/w ²⁾ | |
| CAV function | CLOSE/ V'_{min} / V'_{max} : Shut-off level CLOSE 0.1 CLOSE/ V'_{min} / V'_{max} : Shut-off level CLOSE 0.5 V'_{min} / V'_{mid} / V'_{max} (NMV-D2M-comp.) | | – | r/w | – | |
| Positioning signal Y | Start value: 0...30; Stop value: 2...32 | V | r | r/w | r | |
| Feedback U | Volume / Damper position / Δp | | – | r/w | – | Definition of feedback signal |
| Feedback U | Start value: 0...8; Stop value: 2...10 | V | – | r/w | – | |
| Behaviour when switched on (Power-on) | No action / Adaptation / Synchronisation | | – | r/w | – | |
| Synchronisation behaviour | Y=0% Y=100% | | – | r/w | – | Synchronisation at damper position 0 or 100% |
| Bus fail position | Last setpoint / Damper CLOSE V'_{min} / V'_{max} / Damper OPEN | | – | r/w | – | |
| Unit-specific settings | | | | | | |
| V'_{nom} | 0...60'000 m ³ /h | m ³ /h / l/s / cfm | r | r/(w) ¹⁾ | r | Unit-specific setting value |
| $\Delta p@V'_{nom}$ | 38...450 | Pa | r | r/(w) ¹⁾ | r | Unit-specific setting value |
| NFC interface | Read / Read and write | | – | r/(w) ¹⁾ | r | |
| Print function label | | | – | w | – | |
| Other settings | | | | | | |
| Direction of rotation (for Y=100%) | cw/ccw | | r/w ²⁾ | r/w | r/w ²⁾ | |
| Range of rotation | Adapted ²⁾ / programmed 30...95 | ° | – | r/w | – | |
| Torque | 100 / 75 / 50 / 25 | % | | r/w | | % of nominal torque |
| Renovation of old systems (Retrofit of old VAV units with leaking damper) | | | | | | |
| Suppress damper leakage | Yes / No | | – | r/w ¹⁾ | – | Suppresses volume display with damper closed |

¹⁾ Write function accessible only for VAV manufacturers

¹⁾ Access only via Servicing level 2


²⁾ Within the mechanical limitation

Parameter and tool overview

Settings and tool function

| Designation | Setting values, limits, explanations | Units | Tool | | | Remarks |
|---------------------------|---|-------------------------------|--------|---------|---------------|-----------------------------|
| | | | ZTH EU | PC-Tool | Assistant app | |
| Operating data | | | | | | |
| Actual value / Setpoint | | m ³ /h / l/s / cfm | r | r | r | T (Trend) display |
| Damper position | | Pa / % | - | T | T | |
| Simulation | Damper OPEN/CLOSE V'min / V'mid / V'max / Motor Stop | | w | w | - | |
| Running times | Operating time, running time Ratio (relation) | h % | - | r | r | |
| Alarm messages | Setting range enlarged, Mech. overload, Stop&Go ratio too high | | - | r/w | - | |
| Serial number | Device ID | | r | r | r | Incl. production date |
| Type | Type designation | | r | r | r | |
| Version display | Firmware, Config. table ID | | r | r | - | |
| Configuration data | | | | | | |
| Print, send | | | - | yes | yes | |
| Backup in file | | | - | yes | yes | |
| Log data / Logbook | Activities log | | - | yes | - | Incl. complete setting data |

Operating controls and indicators

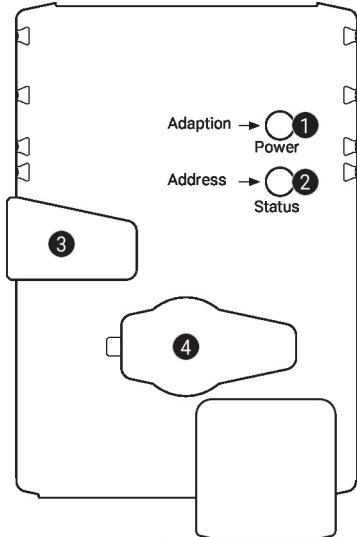
1 Push-button and LED display green

Off: No power supply or malfunction

On: In operation

Press button: Triggers angle of rotation adaptation, followed by standard mode

2 Push-button and LED display yellow

Off: Standard mode

On: Adaptation or synchronisation process active

Flickering: MP-Bus communication active

Flashing: Request for addressing from MP client

Press button: Confirmation of the addressing

3 Manual override button

Press button: Gear train disengages, motor stops, manual override possible

Release button: Gear train engages, synchronisation starts, followed by standard mode

4 Service plug

For connecting parametrisation and service tools

Check power supply connection
1 Off and **2** On Possible wiring error in power supply

Installation notes

- Installation situation** Mounting VAV-Compact control equipment:
The VAV-Compact is assembled, set and calibrated on the VAV unit in the factory by the VAV unit manufacturer.
- Installation of the VAV unit:
The VAV unit must be installed according to the specifications of the VAV unit manufacturer.
- Installation specification Δp sensor:
No restrictions, but it must be avoided that any condensation can run into the sensor and remain there.
- Accessibility of control equipment:
Accessibility to the control equipment must be guaranteed at all times.
- Pressure tube connections:
The pressure tube connections must not come into contact with liquids or greasing agents of any kind, this includes any residue inside or on the surface of the pressure tubes.
- Servicing** Cleaning work during installation, commissioning or maintenance
Belimo VAV devices are maintenance-free. We recommend dry removal of dust from the outside of the housing if necessary.
- The duct system and the VAV units are maintained on the occasion of the cleaning intervals required by law or by the specific system. Please observe the following points.
- Cleaning work on the damper, differential pressure pickup devices and pressure tubes
When cleaning the duct system or the VAV unit, remove the pressure tubes on the VAV controller so that it will not be affected.
- Using compressed air, e.g. blowing out the differential pressure pickup devices or pressure tubes
Before doing this work, disconnect the differential pressure pickup devices or pressure tubes from the differential pressure sensor.
- Connecting the pressure tubes
To ensure the correct installation of the pressure tubes, we recommend marking them with + or - before disassembly.

Service


Wireless connection Belimo devices marked with the NFC logo can be operated with Belimo Assistant 2.

Requirement:

- NFC- or Bluetooth-capable smartphone
- Belimo Assistant 2 (Google Play and Apple AppStore)


Align NFC-capable smartphone on the device so that both NFC antennas are superposed.

Connect Bluetooth-enabled smartphone via the Bluetooth-to-NFC converter ZIP-BT-NFC to the device. Technical data and operating instructions are shown in the ZIP-BT-NFC data sheet.

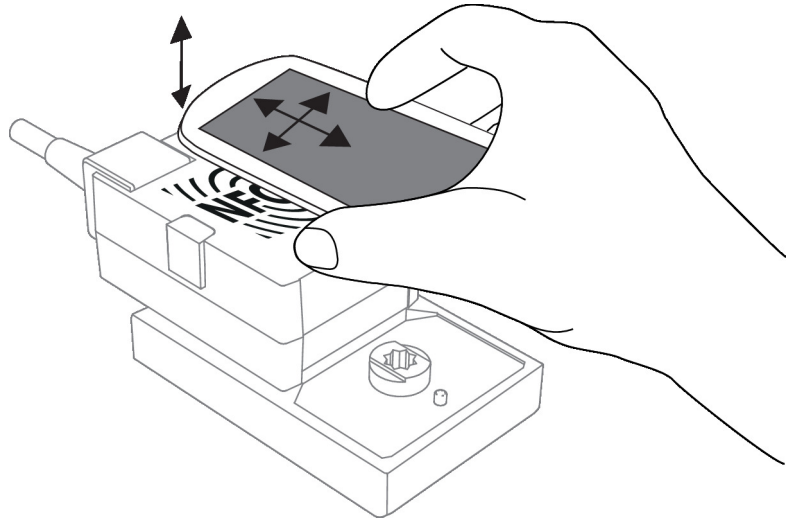


Wired connection The device can be parametrised by ZTH EU via the service socket. For an extended parametrisation, Belimo Assistant 2 can be connected.

Connection ZTH EU / Belimo Assistant 2

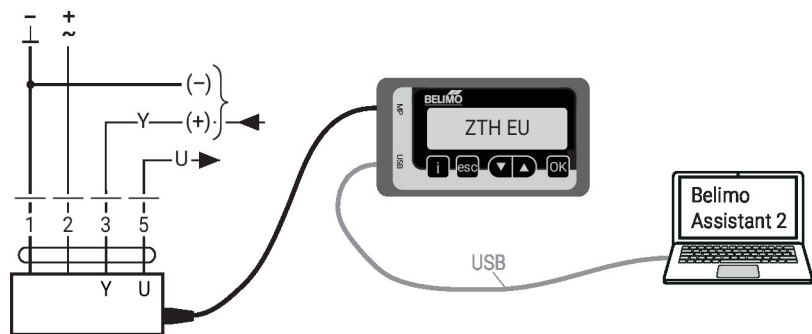

Dimensions

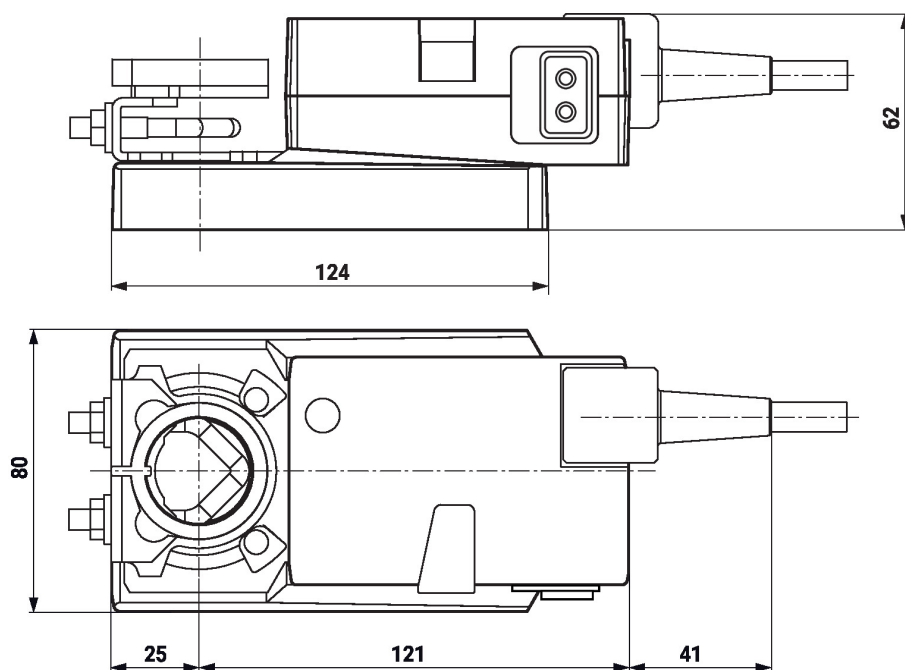

Further documentation

- VAV-Compact product range for comfort applications
- Tool connections
- Overview MP Cooperation Partners
- Introduction to MP-Bus Technology
- VAV-Universal application description
- Volumetric flow and pressure control from Belimo, product range overview
- Quick Guide – Belimo Assistant 2