

Technical data sheet

Communicative rotary actuator for ball valves

- Torque motor 20 Nm
- Nominal voltage AC/DC 24 V
- Control modulating, communicative 2...10 V variable
- Position feedback 2...10 V variable
- Communication via Belimo MP-Bus
- Conversion of sensor signals



Technical data

Electrical data	Nominal voltage	AC/DC 24 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V
	Power consumption in operation	3.5 W
	Power consumption in rest position	1.5 W
	Power consumption for wire sizing	6 VA
	Connection supply / control	Cable 1 m, 4x 0.75 mm ²
	Parallel operation	Yes (note the performance data)
Data bus communication	Communicative control	MP-Bus
	Number of nodes	MP-Bus max. 8
Functional data	Torque motor	20 Nm
	Operating range Y	210 V
	Input impedance	100 kΩ
	Operating range Y variable	Start point 0.530 V
		End point 2.532 V
	Operating modes optional	Open/close
		3-point (AC only)
		Modulating (DC 032 V)
	Position feedback U	210 V
	Position feedback U note	Max. 0.5 mA
	Position feedback U variable	Start point 0.58 V
	Desition accuracy	End point 2.510 V ±5%
	Position accuracy	
	Manual override	with push-button, can be locked 35 s / 90°
	Running time motor	35.57.90 35150.s
	Running time motor variable Sound power level, motor	
	· · · · · · · · · · · · · · · · · · ·	55 dB(A)
	Adaptation setting range	manual (automatic on first power-up)
	Adaptation setting range variable	No action Adaptation when switched on
		Adaptation after pushing the manual override
		button
	Override control	MAX (maximum position) = 100%
		MIN (minimum position) = 0%
		ZS (intermediate position, AC only) = 50%



Technical data sheet

Functional data	Override control variable	MAX = (MIN + 33%)100%
		MIN = 0%(MAX – 33%)
		ZS = MINMAX
	Position indication	Mechanical, pluggable
Safety data	Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)
	Power source UL	Class 2 Supply
	Degree of protection IEC/EN	IP54
	Degree of protection NEMA/UL	NEMA 2
	Housing	UL Enclosure Type 2
	EMC	CE according to 2014/30/EU
	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
	UL Approval	cULus according to UL60730-1A, UL60730-2-14
		and CAN/CSA E60730-1
		The UL marking on the actuator depends on
		the production site, the device is UL-compliant
		in any case
	Type of action	Туре 1
	Rated impulse voltage supply / control	0.8 kV
	Pollution degree	3
	Ambient humidity	Max. 95% RH, non-condensing
	Ambient temperature	-3050°C [-22122°F]
	Storage temperature	-4080°C [-40176°F]
	Servicing	maintenance-free
Weight	Weight	0.91 kg

Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the device and that it is ensured that the ambient conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- The switch for changing the direction of rotation may only be operated by authorised specialists. The direction of rotation must not in particular be reversed in a frost protection circuit.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- Cables must not be removed from the device.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.



Product features	
Operating mode	Conventional operation: The actuator is connected with a standard control signal of 010 V and drives to the position defined by the control signal. The measuring voltage U serves for the electrical display of the actuator position 0.5100% and as control signal for other actuators. Operation on Bus: The actuator receives its digital control signal from the higher level controller via the MP-Bus
Converter for sensors	and drives to the position defined. Connection U serves as communication interface and does not supply an analogue measuring voltage.Connection option for a sensor (passive or active sensor or switching contact). The MP actuator serves as an analogue/digital converter for the transmission of the sensor signal via MP-Bus to the higher level system.
Parametrisable actuators	The factory settings cover the most common applications. Single parameters can be modified with Belimo Assistant 2 or ZTH EU.
Simple direct mounting	Straightforward direct mounting on the ball valve with only one central screw. The assembly tool is integrated in the plug-in position indication. The mounting orientation in relation to the ball valve can be selected in 90° steps.
Manual override	Manual override with push-button possible (the gear train is disengaged for as long as the button is pressed or remains locked).
Adjustable angle of rotation	Adjustable angle of rotation with mechanical end stops.
High functional reliability	The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.
Home position	The first time the supply voltage is switched on, i.e. at the time of commissioning, the actuator carries out an adaptation, which is when the operating range and position feedback adjust themselves to the mechanical setting range.
	The actuator then moves into the position defined by the control signal. Factory setting: Y2 (counter-clockwise rotation).
Adaptation and synchronisation	An adaptation can be triggered manually by pressing the "Adaptation" button or with Belimo Assistant 2. Both mechanical end stops are detected during the adaptation (entire setting range).
	Automatic synchronisation after pressing the manual override button is parametrised. The synchronisation is in the home position (0%).
	The actuator then moves into the position defined by the control signal.
	A range of settings can be made using Belimo Assistant 2.

Accessories

Tools	Description	Туре
	Service tool, with ZIP-USB function, for parametrisable and communicative Belimo actuators, VAV controller and HVAC performance devices	ZTH EU
	Service tool for wired and wireless setup, on-site operation, and troubleshooting.	Belimo Assistant 2
	Adapter for Service-Tool ZTH	MFT-C
	Connecting cable 5 m, A: RJ11 6/4 ZTH EU, B: 6-pin for connection to service socket	ZK1-GEN
	Connecting cable 5 m, A: RJ11 6/4 ZTH EU, B: free wire end for connection to MP/PP terminal	ZK2-GEN
Electrical accessories	Description	Туре
	Auxiliary switch 1x SPDT add-on	S1A



	Description	Туре
	Auxiliary switch 2x SPDT add-on	S2A
	Feedback potentiometer 140 Ω add-on	P140A
	Feedback potentiometer 1 kΩ add-on	P1000A
	Feedback potentiometer 10 kΩ add-on	P10000A
	MP-Bus power supply for MP actuators	ZN230-24MP
Gateways	Description	Туре
	Gateway MP to BACnet MS/TP	UK24BAC
	Gateway MP to Modbus RTU	UK24MOD

Electrical installation

Supply from isolating transformer.


Parallel connection of other actuators possible. Observe the performance data.

Direction of rotation switch is covered. Factory setting: Direction of rotation Y2.

Wire colours:

- 1 = black 2 = red
- 3 = white
- 5 = orange




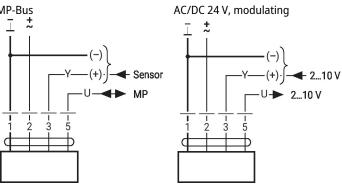


Further electrical installations

Functions with basic values (conventional mode)

Override control with AC 24 V with relay contacts

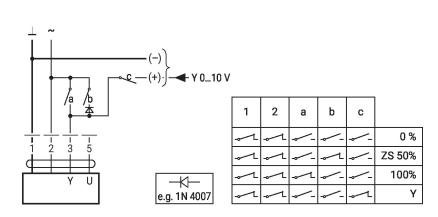


Override control with AC 24 V with rotary switch

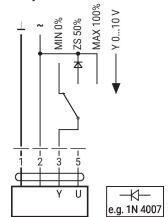





Functions with basic values (conventional mode)

Control remotely 0...100% with Minimum limit with positioner SG..

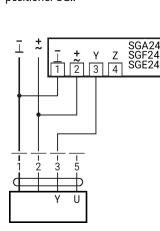


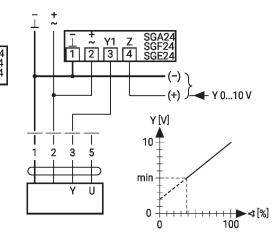

Primary/secondary operation (position-dependent) $\overline{-}$ \ddagger

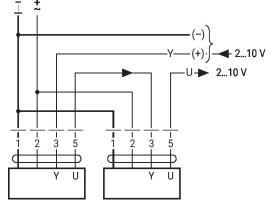

Control with 4...20 mA via external resistor

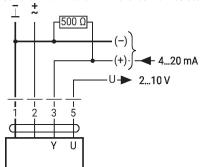


Caution:

The operating range must be set to DC 2...10 V. The 500 Ohm resistor converts the 4...20 mA current signal to a voltage signal DC 2...10 V.



Functions with basic values (conventional mode)

Functional check

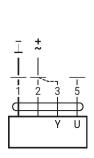

Procedure


 Connect 24 V to connections 1 and 2
 Disconnect connection 3:


 with direction of rotation L: Actuator rotates to the left
 with direction of rotation R: Actuator rotates to the right
 Short-circuit connections 2 and 3:

 Actuator runs in opposite direction

MP-Bus

Connection on the MP-Bus

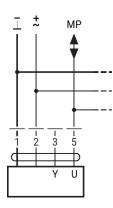

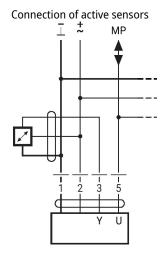


• Supply AC/DC 24 V • Output signal 0...10 V (max.

0...32 V)

• Resolution 30 mV

Connection of external switching contact $\overline{\perp}$ $\stackrel{+}{\sim}$ MP

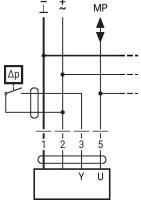


• Switching current 16 mA @ 24 V


Max. 8 MP-Bus nodes

• Start point of the operating range must be parametrised on the MP actuator as ≥0.5 V



MP-Bus

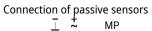


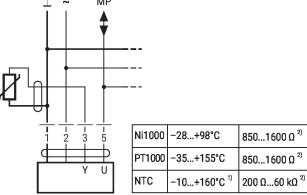


1) Depending on the type 2) Resolution 1 Ohm Compensation of the measured value is recommended

Control open/close

Functions with specific parameters (Parametrisation necessary) Override control and limiting with AC 24 V with relay contacts

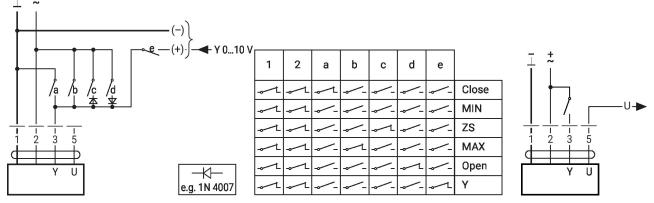

Override control and limiting with AC 24 V with rotary switch

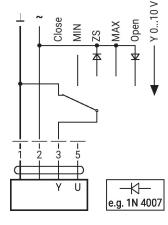


Caution:


The "Close" function is only guaranteed if the start point of the operating range is defined as min. 0.5 V.




Further electrical installations

Functions with specific parameters (Parametrisation necessary) Control 3-point with AC 24 V

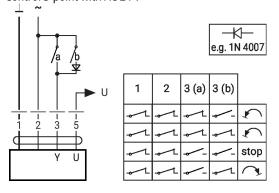

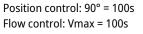

Operating controls and indicators

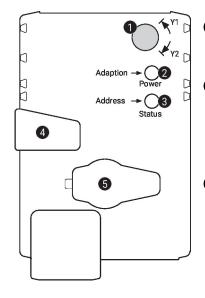

1 Direction of rotation switch

Switch over:

Push-button and LED display green 2

Off:	No power supply or malfunction
On:	In operation
Press button:	Triggers angle of rotation adaptation, followed by standard mode

Direction of rotation changes

3 Push-button and LED display yellow

Off:	Standard mode
On:	Adaptation or synchronisation process active
Flickering:	MP-Bus communication active
Flashing:	Request for addressing from MP client
Press button:	Confirmation of the addressing

Manual override button 4

Press button: Gear train disengages, motor stops, manual override possible Release button: Gear train engages, standard mode

5 Service plug

For connecting parametrisation and service tools

Check power supply connection

2 Off and **3** On

Possible wiring error in power supply




Service


Wired connection


ction The device can be parametrised by ZTH EU via the service socket. For an extended parametrisation, Belimo Assistant 2 can be connected.

Connection ZTH EU / Belimo Assistant 2

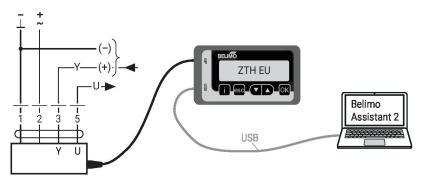

Dimensions

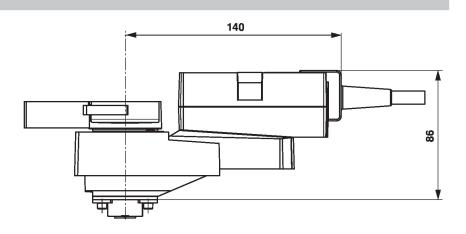

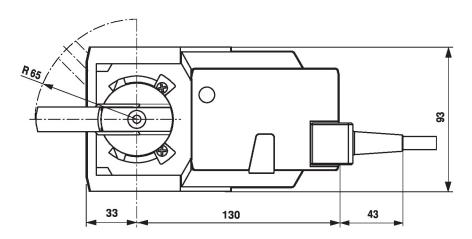



Further documentation

- Overview MP Cooperation Partners
- Tool connections
- Introduction to MP-Bus Technology
- The complete product range for water applications
- Data sheets for ball valves
- Installation instructions for actuators and/or ball valves
- General notes for project planning
- Quick Guide Belimo Assistant 2