



Differential pressure sensor Air

Differential pressure transmitter with 8 selectable ranges and BACnet functionality. For monitoring over-, under or the differential pressure of air and other non-flammable and non-aggressive gases. Typical application in HVAC systems for monitoring air filters, fan Vbelts or fire dampers and smoke control dampers. Options available with LCD display. IP65 / NEMA 4X rated enclosure.





Type Overview

Туре	Measuring range [Pa]	Measuring range [inch WC]	Communication	Output signal active pressure	Output signal active volumetric flow	Burst pressure	Display type	Additional features
22ADP-56Q	-150250	-0.61	BACnet MS/TP	05 V, 010 V	′ 05 V, 010 V	160 inch WC [40 kPa]	-	-
22ADP-56QB	-150250	-0.61	BACnet MS/TP	05 V, 010 V	′ 05 V, 010 V	160 inch WC [40 kPa]	LCD	Auto-Zero

Technical data

Electrical Data	Nominal voltage	AC/DC 24 V		
	Nominal voltage range	AC 1929 V / DC 1535 V		
	Power consumption AC	4.3 VA		
	Power consumption DC	2.3 W		
	Electrical connection	Pluggable spring-loaded terminal block max. 2.5 mm ²		
	Cable entry	Cable gland with strain relief 2x ø6 mm (1/2" NPT conduit adapter included)		
Data bus communication	Communication	BACnet MS/TP		
	Number of nodes	BACnet see interface description		
Functional Data	Application	Air		
	Multirange	8 measuring ranges selectable		
	Voltage output	2 x 05 V, 010 V, min. resistance 10 $k\Omega$		
	Output signal active note	Output 05/10 V selectable with switch		
	Display	LCD, 1.14x1.38" [29x35 mm]		
		with backlight		
		Measured values: Pa, inch WC		
		(programmable)		
		Measured values volumetric flow: m³/h, cfm (parametrisable)		
	Typical response time	adjustable 0.8 s or 4.0 s		
Measuring Data	Measured values	Differential pressure Volumetric flow		
	Measuring fluid	air and non-aggressive gases		
Specification flow	Measuring range volumetric flow	Adjustable via BACnet Default setting: 0750'000 cfm Selectable units: m³/h, m³/s, cfm		



22ADP-56Q..

Technical data

Specification pressure	Sensing element technology	piezo measuring element				
	Measuring range pressure settings	Setting	Range [Pa]	Range [inch WC]	Factory	
		60	0 250	0.4	setting	
		S0 S1	0250 0100	01 00.4		
		51 52	050	00.4		
		S3	025	00.1		
		S4	-2525	-0.10.1		
		S5	-5050	-0.20.2		
		S6	-100100	-0.40.4		
		S7	-150150	-0.60.6		
	Accuracy	±0.004	inch WC @ ra	nge <1 inch WC		
	Long term stability	±2.5% F	SO (Full Scale	Output) / 4 yr.		
Safety Data	Protection class IEC/EN	III, Safe	ty Extra-Low	v Voltage (SELV)		
	Power source UL	Class 2	2 Supply			
	Degree of protection IEC/EN	IP65				
	Degree of protection NEMA/UL	NEMA 4	X			
	Enclosure	UL Encl	UL Enclosure Type 4X			
	EU Conformity	CE Marl	king			
	Certification IEC/EN	IEC/EN	60730-1 and	IEC/EN 60730-2-6		
	Quality Standard	ISO 900	1			
	UL Approval	cULus acc. to UL60730-1A/-2-6, CAN/CSA E60730-1				
	Type of action	Type 1				
	Rated impulse voltage supply	0.8 kV				
	Pollution degree	3				
	Ambient humidity	Max. 95	% RH, non-co	RH, non-condensing		
	Ambient temperature	14122	4122°F [-1050°C]			
	Fluid temperature	15120	°F [-1050°C]		
	Storage temperature	-4176	°F [-2080°C]		
Materials	Cable gland	PA6, bla	ack			
	Housing		PC, orange			
			: PC, orange			
			3R70, black			
		UV resis	stant			

Safety Notes



This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application. Unauthorized modifications are prohibited. The product must not be used in relation with any equipment that in case of a failure may threaten humans, animals or assets.

Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Only authorized specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.

The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.



Remarks					
Automated zero-point calibration (Auto Zero)	Transmitters equipped with the auto-zero calibration are maintenanc	e-free.			
	The auto-zero calibration electronically adjusts the transmitter zero en function eliminates all output signal drift due to thermal, electronic o auto-zero adjustment takes approx. 4 seconds after which the device measuring mode. During the 4 second adjustment period, the output freeze to the latest measured value.	r mechanical effects. Th returns to its normal			
Manual zero-point calibration	After initial commissioning				
	To carry out the zero-point calibration, the device must be connected least 15 minutes beforehand.	to the power supply at			
	Calibration interval				
	≤1 inch WC 3 months				
	Procedure				
	• Release both tube connectors from the pressure ports + and -				
	(Carry out the manual zero-point calibration even if the display shows				
	Press the button "Manual zero-point calibration" until the LED lights				
	• Wait until the LED flashes again and reinstall the tube connectors to attention to + and -)	the pressure ports (pay			
Indicators and Operation					
Indicators	Depending on the device and the number of measured values, the dis scales. Parameters, such as the fading in/out of measured values, brig function, are changed via the app or bus system. During the boot pro hardware versions are displayed.	ghtness and traffic light			
	1 Fault / sensor failure				
	2 Service / visual inspection due				
∮<u>4 % 8 </u>? (3 TLF (traffic light function) active (thresholds for display color changes)				
$6 \xrightarrow{I} dP \star \mathbf{P} \overset{Pa}{\longleftarrow} \mathbf{P} \overset{Pa}{\longleftrightarrow} \mathbf{P} \overset{Pa}{ P \overset{Pa}{\longleftrightarrow} \mathbf{P} \overset{Pa}{\longleftrightarrow} $	4 Radio active (not available)				
	5 Status bar				
	6 Measured value (* appears when TLF function is activated for this v	/alue)			
	7 Unit of measure				
	8 Measured value				
Parts included					
		_			
	Description	Туре			
	Mounting plate L housing Duct connector kit, PVC tube 2 m, 2x duct connector (plastic) for 22ADP	A-22D-A10 A-22AP-A08			
	Cable Gland with strain relief ø68 mm Dowels Screws				
	1/2" NPT conduit adapter, 2x ø6 mm				
Accessories					
Optional accessories	Description	Туре			
•					



Technical data sheet

22ADP-56Q..

		Description	Туре		
		Duct connector, Metal, L 4", Tube connection 0.2"	A-22AP-A03		
Service					
Tool	s connection	n This sensor can be operated and parametrized using the Belimo Assistant App. When using the Belimo Duct Sensor Assistant App, the Bluetooth dongle is required to ena communication between the app and the Belimo sensor.			
		For the standard operation and parametrization of the sensor the Blue Belimo Duct Sensor Assistant App are not needed. The sensor will arriv the factory default settings shown above.	5		
		Requirement: - Bluetooth dongle (Belimo Part No: A-22G-A05)			
		- Bluetooth-capable smartphone - Belimo Duct Sensor Assistant App (Google Play & Apple App Store)			
		Procedure: - Plug the Bluetooth dongle into the sensor via the Micro-USB connector interface PCB - Connect Bluetooth-capable smartphone with Bluetooth dongle - Select parametrization in the Belimo Assistant App	or or by means of the		

Wiring Diagram




Supply from isolating transformer.

The wiring of the line for BACnet (MS/TP) has to be carried out in accordance with applicable RS485 regulations.

BACnet GND: Supply and communication are not galvanically isolated. Connect earth signal of the devices with one another.



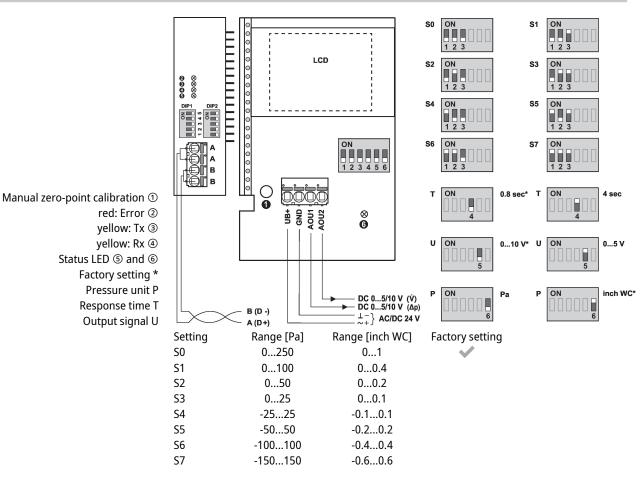

Detailed documentation

 The separate document, BACnet PICS, informs about the PICS, MAC addressing and bus termination (DIP1 & DIP2).


In addition to the information on the bus, the following analog outputs are available:

AOU1: differential pressure

AOU2: volumetric flow


The volumetric flow is calculated from the differential pressure, the k-factor and the height. Factory setting for the k-factor is 1.00 and for the height 330 metres above sea level. The values of the k-factor and the height can be changed via bus system.


Wiring RS485 BACnet MS/TP

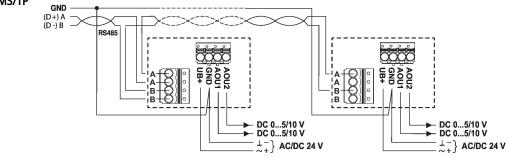



Dimensions

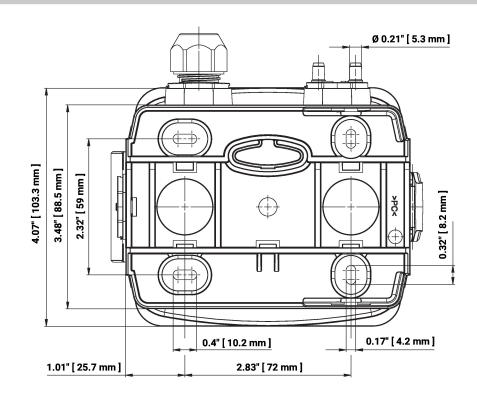

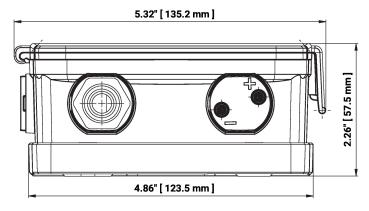

Further documentation

- BACnet Interface description
- Installation instructions