

Differential pressure sensor Water

Active sensor (4...20 mA / 0...5 V / 0...10 V) for differential pressure measurement in HVAC systems. The sensor is suitable for water and water-glycol mixtures. IP65/NEMA 4X rated enclosure and with LCD display.



5-year warranty


Type Overview

| Type | Measuring range [psi] | Output signal active pressure | Overpressure | Overpressure note | Burst pressure |
|------------|-----------------------|-------------------------------|--------------|-------------------|----------------|
| 22PDP-585A | 0...100 | 4...20 mA, 0...5 V, 0...10 V | 200 psi | Single-sided | 2000 psi |
| 22PDP-588A | 0...250 | 4...20 mA, 0...5 V, 0...10 V | 500 psi | Single-sided | 5000 psi |

Technical data

| | | | | | | |
|-------------------------------|-----------------------------------|---|---------|---------|--------|--------|
| Electrical Data | Nominal voltage | AC/DC 24 V | | | | |
| | Nominal voltage range | AC 21.6...26.4 V / DC 21.6...26.4 V | | | | |
| | Power consumption AC | 3.1 VA | | | | |
| | Power consumption DC | 1.4 W | | | | |
| | Electrical connection | Pluggable spring-loaded terminal block max. 2.5 mm ² | | | | |
| | Cable entry | Cable gland with strain relief ø6...8 mm | | | | |
| | Cable specification | Armored cable | | | | |
| Functional Data | Application | Water Water-glycol mixture | | | | |
| | Multirange | 4 measuring ranges selectable | | | | |
| | Voltage output | 1 x 0...5 V, 0...10 V, min. resistance 10 kΩ | | | | |
| | Current output | 1x 4...20 mA, max. resistance 500 Ω | | | | |
| | Output signal active note | 0...5/10 V or 4...20 mA output, selectable with switch | | | | |
| | Mechanical connection | pressure connector: 1/4" NPT | | | | |
| | Display | LCD, 0.63x1.50" [16x38 mm] | | | | |
| Typical response time | <0.5 s | | | | | |
| Measuring Data | Measured values | Differential pressure | | | | |
| Specification pressure | Measuring range pressure settings | Type | Range1 | Range2 | Range3 | Range4 |
| | | | [psi] | [psi] | [psi] | [psi] |
| | | ..-585 | 0...100 | 0...10 | 0...20 | 0...50 |
| ..-588 | 0...250 | 0...25 | 0...50 | 0...125 | | |
| Factory setting: Range1 | | | | | | |

Technical data

| | | |
|-------------------------------|------------------------------|--|
| Specification pressure | Accuracy | Range1: $\pm 1.0\%$ FS Range2: $\pm 0.5\%$ FS Range3: $\pm 0.4\%$ FS Range4: $\pm 0.4\%$ FS ...@ 22°C [72°F] $\pm 0.03\%$ FS / K for each pressure transmitter FS = full scale (FS always references the maximum sensor measuring range, independent of the selected measuring range) |
| | Long term stability | $\pm 0.25\%$ FS p.a. and per pressure transmitter |
| Safety Data | Protection class IEC/EN | III, Safety Extra-Low Voltage (SELV) |
| | Degree of protection IEC/EN | IP65 |
| | Degree of protection NEMA/UL | NEMA 4X |
| | Housing | UL Enclosure Type 4X |
| | EU Conformity | CE Marking |
| | Certification IEC/EN | IEC/EN 60730-1 and IEC/EN 60730-2-6 |
| | Quality Standard | ISO 9001 |
| | UL Approval | cULus acc. to UL60730-1/-2-6, CAN/CSA E60730-1/-2 |
| | Type of action | Type 1 |
| | Rated impulse voltage supply | 0.8 kV |
| | Pollution degree | 4 |
| | Ambient humidity | Max. 95% RH, non-condensing |
| | Ambient temperature | 32...122°F [0...50°C] |
| | Fluid temperature | -40...220°F [-40...105°C] Frost protection must be guaranteed at fluid temperatures $< 2\text{ }^{\circ}\text{C}$ [$< 36^{\circ}\text{F}$] |
| Storage temperature | -40...140°F [-40...60°C] | |
| Materials | Housing | Cover: PC, transparent Bottom: PC, orange Seal: NBR |
| | Cable gland | PA6, black |
| | Fluid wetted parts | Stainless steel 17-4 PH |

Safety Notes


This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application. Unauthorized modifications are prohibited. The product must not be used in relation with any equipment that in case of a failure may threaten humans, animals or assets.

Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Only authorized specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.

The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Remarks

Manual zero-point calibration In normal operation zero-point calibration should be executed every 12 months.

A sensor zeroing can be initiated by pressing and holding the internal ZERO switch for at least 3 seconds. If both pressure ports are close to zero pressure, the device will calibrate with a new zero point. The zeroing can also be initiated by pressing the optionally connected remote switch, and thus by holding the ZERO terminal low for 3 seconds.

Please make sure on the system side that the same pressure conditions exist at both remote sensors as precondition of a correct zeroing.

NOTE: Both the low and high pressure sensors must be open to atmosphere to perform the autozeroing function.

Indicators and Operation


Indicators The display has 2 lines with 8 characters each.

The software version, model pressure range and output signal type are displayed during booting.

The display is menu-guided and used for programming during installation as well as for display of pressure read from sensors.

The menu allows to set parameters such as output signal, pressure range, pressure scale, pressure port, damping and backlight.

For a convenient reading of the display, an upright wall mounting of the sensor housing with the display at the top, electrical connections on the right and at the bottom is recommended.

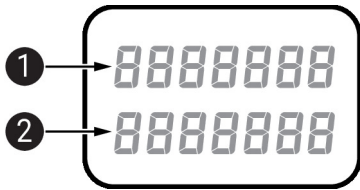

1 Start and programming

Line 1: Parameter
Line 2: Value

2 Operation

Line 1: Differential pressure value
Line 2: Differential pressure unit

Parts included

| Description | Type |
|--|-----------|
| Mounting plate L housing | A-22D-A10 |
| Cable Gland with strain relief ø6...8 mm | |
| Dowels | |
| Screws | |

Accessories


| Optional accessories | Description | Type |
|------------------------|---|-------------|
| | 3-valve manifold with bracket, for installing and isolating pipe differential sensors | EXT-GS-3WM |
| | Reduction adapter, G 1/4" (internal thread) to G 1/2" (external thread) | A-22WP-A02 |
| | Connection adapter flex conduit, M20x1.5, for cable gland 1x 6 mm, Multipack 10 pcs. | A-22G-A01.1 |
| Electrical accessories | Description | Type |
| | Stainless steel cable extension | A-22PDP-A01 |

Wiring Diagram




The external switch at terminal ZERO is optional. It can be used in case remote zeroing is required. Otherwise, ZERO terminal can be left open. Zeroing can be initialized by pressing the internal ZERO key in this case.

See also details under chapter manual zero-point calibration.

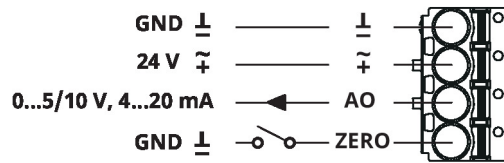

Dimensions

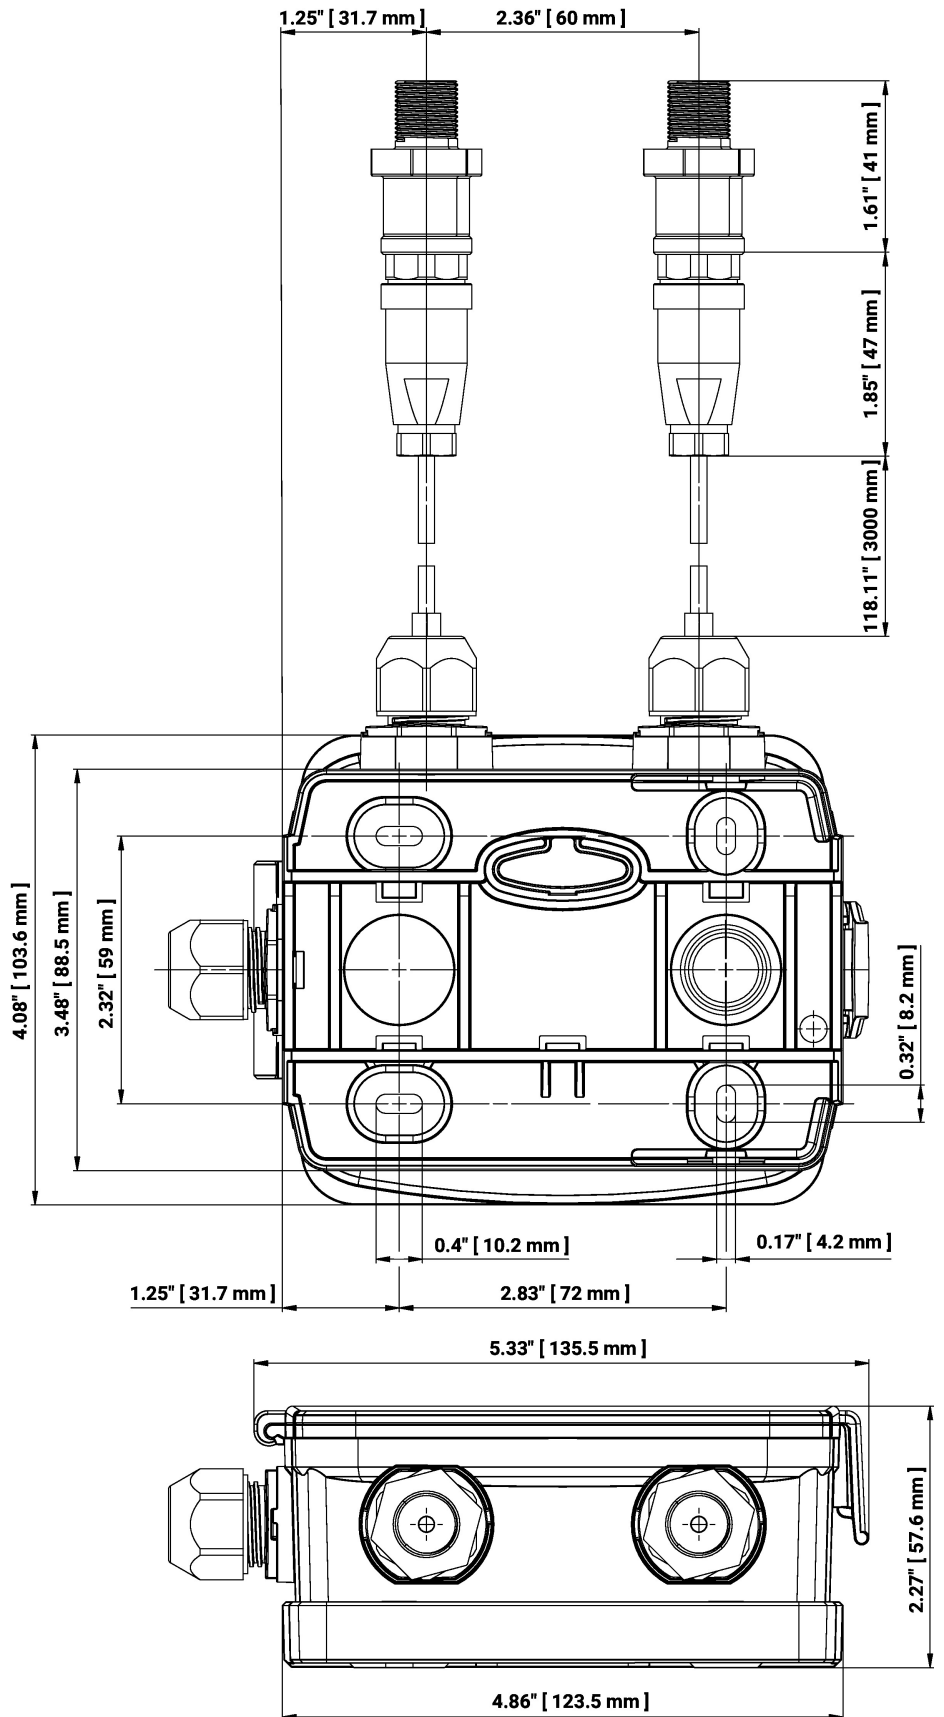

Further documentation

- Installation instructions
- Operating instructions