

ZoneTight™, 3-way, Sweat

- For closed chilled and hot water systems
- For switching functions and 2-point controls on the water side of air-handling units and heating systems
- Snap-assembly of the actuator







Picture may differ from product

Type overview

Type DN Z3050QS-E 15

Technical data

FI BC CI	uid uid Temp Range (water) ody Pressure Rating lose-off pressure Δps ifferential pressure Δpmax	chilled or hot water, up to 60% glycol 36212°F [2100°C] 360 psi 40 psi
Bo	ody Pressure Rating lose-off pressure Δps	360 psi
CI	lose-off pressure Δps	-
	· ·	40 psi
Di	ifferential pressure Δpmax	
	· · · · · · · · · · · · · · · · · · ·	40psi
Fl	ow characteristic	linear
Le	eakage rate	0%
Pi	ipe connection	Sweat
In	nstallation orientation	upright to horizontal (in relation to the spindle)
Se	ervicing	maintenance-free
Fl	ow Pattern	3-way Diverting
C	V	1
Materials Va	alve body	forged brass
St	tem	brass
St	tem seal	EPDM O-ring
Se	eat	PTFE, O-Ring EPDM
0.	-ring	EPDM (lubricated)
Ba	all	chrome plated brass
Suitable actuators No	on Fail-Safe	CQB(X)
El	ectronic fail-safe	CQKB(X)

Safety notes



WARNING: This product can expose you to lead which is known to the State of California to cause cancer and reproductive harm. For more information go to www.p65warnings.ca.gov
 If temperature exceeds 212°F operating range due to a boiler control failure the valve will safely contain the hot water but manufacturers product warranty becomes invalid. Valve and actuator replacement is at the expense of others.




Product features

Application	The QCV zone valves are suited for large commercial buildings where higher close-off and the ability to change flow is desired. Common applications include unit ventilators, fan coil units, VAV reheat coils, fin tube casing, radiant panels and duct coils. The valve fits in space restricted areas and can be assembled without the use of tools.			
Flow/Mounting details				
Operating mode	e The change-over zone valve is adjusted by a rotary actuator. The rotary actuator is controlled by an on/off signal.			
Simple direct mounting	Tool-free snap assembly.			
	The actuator can be plugged on the valve by hand (Caution! Just vertical movements). Pins must match the holes on the flange.			
	The mounting orientation in relation to the valve can be selected in 180° increments. (Possible two times)			
tallation notes				

Insta

Permissible installation orientation

The ball valve can be installed upright to horizontal. The ball valve may not be installed in a hanging position, i.e. with the stem pointing downwards.

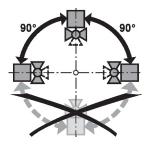

Water quality requirements Belimo valves are regulating devices. For the valves to function correctly in the long term, they must be kept free from particle debris (e.g. welding beads during installation work). The installation of a suitable strainer is recommended.

> Servicing Ball valves and rotary actuators are maintenance-free.


> > Before any service work on the control element is carried out, it is essential to isolate the rotary actuator from the power supply (by unplugging the electrical cable if necessary). Any pumps in the part of the piping system concerned must also be switched off and the appropriate slide valves closed (allow all components to cool down first if necessary and always reduce the system pressure to ambient pressure level).

> > The system must not be returned to service until the ball valve and the rotary actuator have been correctly reassembled in accordance with the instructions and the pipeline has been refilled by professionally trained personnel.






Direction of flow in both directions possible. Flow direction

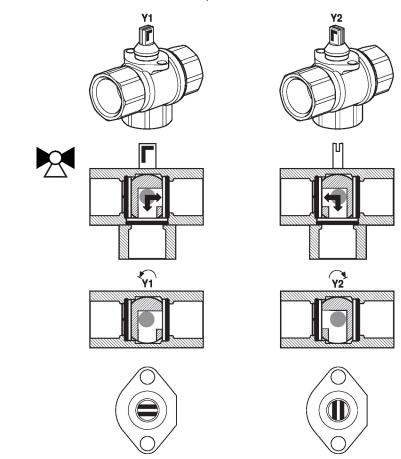

Flow setting At the actuator the end stop clip has to be removed in order to get the angle of rotation of 90°, which is needed for the change-over functionality.

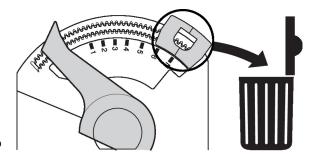

Remove end stop clip

Dimensions

Туре	DN	Weight	
Z3050QS-E	15	0.4 lb [0.18 kg]	



